

150L Spare parts list			
No	Part name	QTY	PART CODE
2,3	door(inclu gasket)	1	3.1.06.2.1.1038
4	basket	1	1.05.08.10.041
5	hinge	2	1.05.06.07.004
6	upper cover	2	1.25.02.15.01.009
7	bottom cover	2	
10~18	compressor & accessories	1	1.03.01.01.415
23	compressor support	1	3.5.2.01.0039
24	castor	2	1.02.08.01.007
25	compressor cover	1	3.1.02.16.062
30	filter	1	1.03.30.03.013
33	power cord	1	1.01.01.01.827R
34	front foot	2	1.02.08.04.004
35	thermostat	1	1.03.02.01.048
36	Control panel	1	1.02.15.04.061
37	Control knob	1	1.02.15.06.048
38	Indicator light red	1	1.01.03.01.040R
39	Indicator light blue	1	1.01.03.01.036R
40	Indicator light green	1	1.01.03.01.037R

BD95JA-282JA
(Exploder drawing)

