

500L Spare parts list

No	Part name		PART CODE
1	door (inclu gasket)	1	3.1.06.2.1.1886
41	basket	1	1.05.08.10.055
40	hinge	1	1.05.06.07.010
		1	1.05.06.07.002
39	upper cover	2	1.25.02.15.01.005
	bottom cover	2	
24-29/14-16/33-34	compressor & accessories	1	1.03.01.01.279
7	compressor support	1	3.5.2.01.0057
10	castor	2	3.5.2.03.003
23	compressor cover	1	3.1.02.16.036
33	filter	1	1.03.30.03.015
19	power cord	1	1.01.01.01.173R
12	thermostat	1	1.03.02.01.016
	Digital Display	1	1.01.07.04.005
	Control panel	1	1.02.15.04. 066
	Control panel cover	1	1.02.15.04. 067
	Control knob	1	1.02.15.06.048
18	front foot	2	1.02.08.04.004
5	handle cover	6	1.25.02.05.01.193
3	Door handle seat	2	1.25.02.05.01.088
42	LED light	1	1.01.03.03.072R

