




HOBART





HE 600-HL

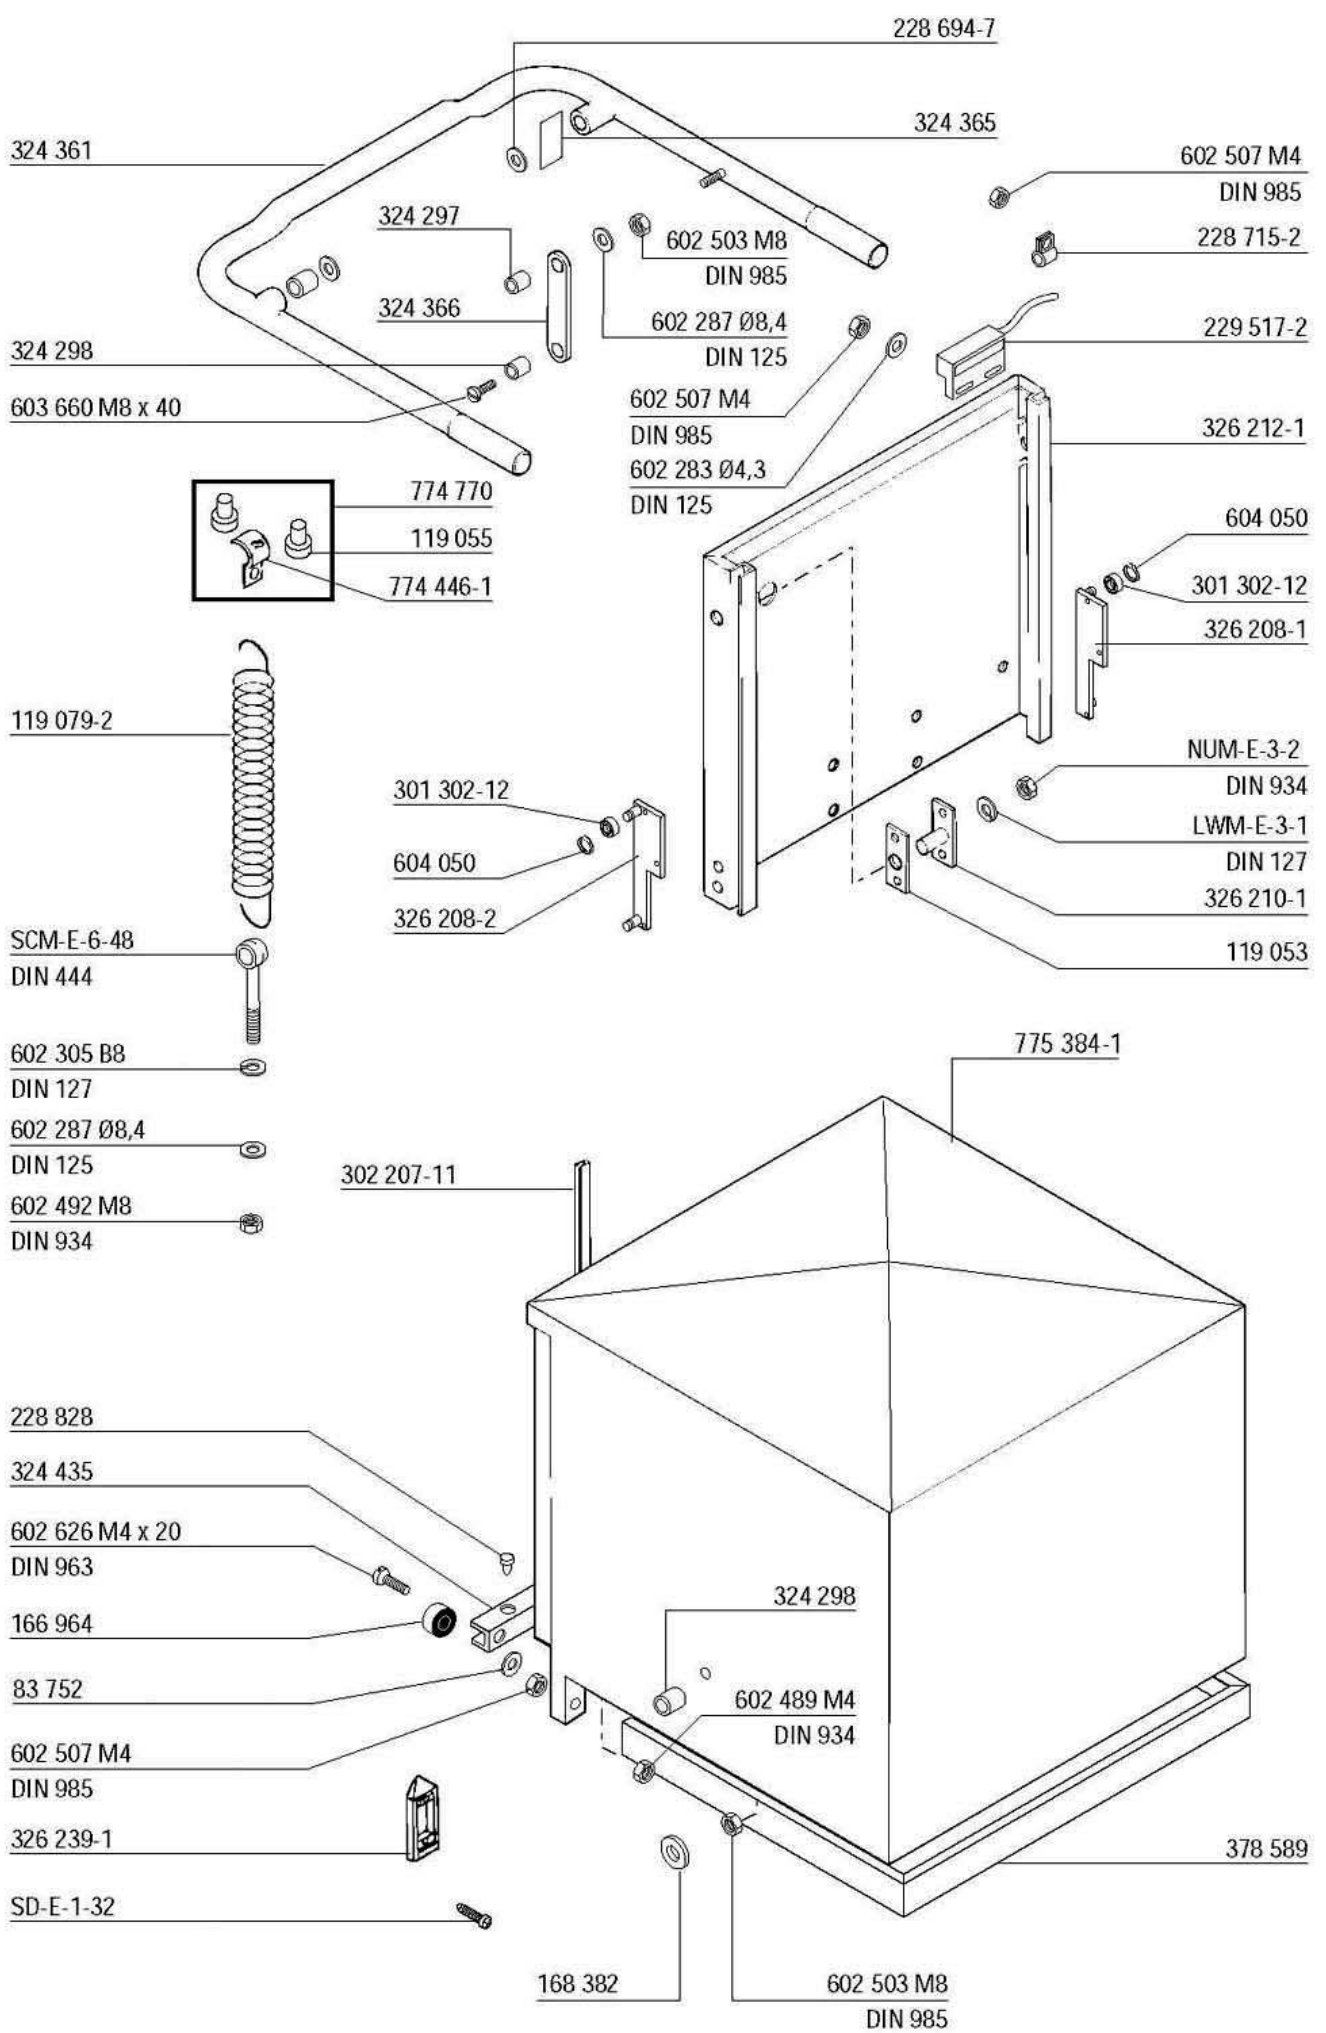


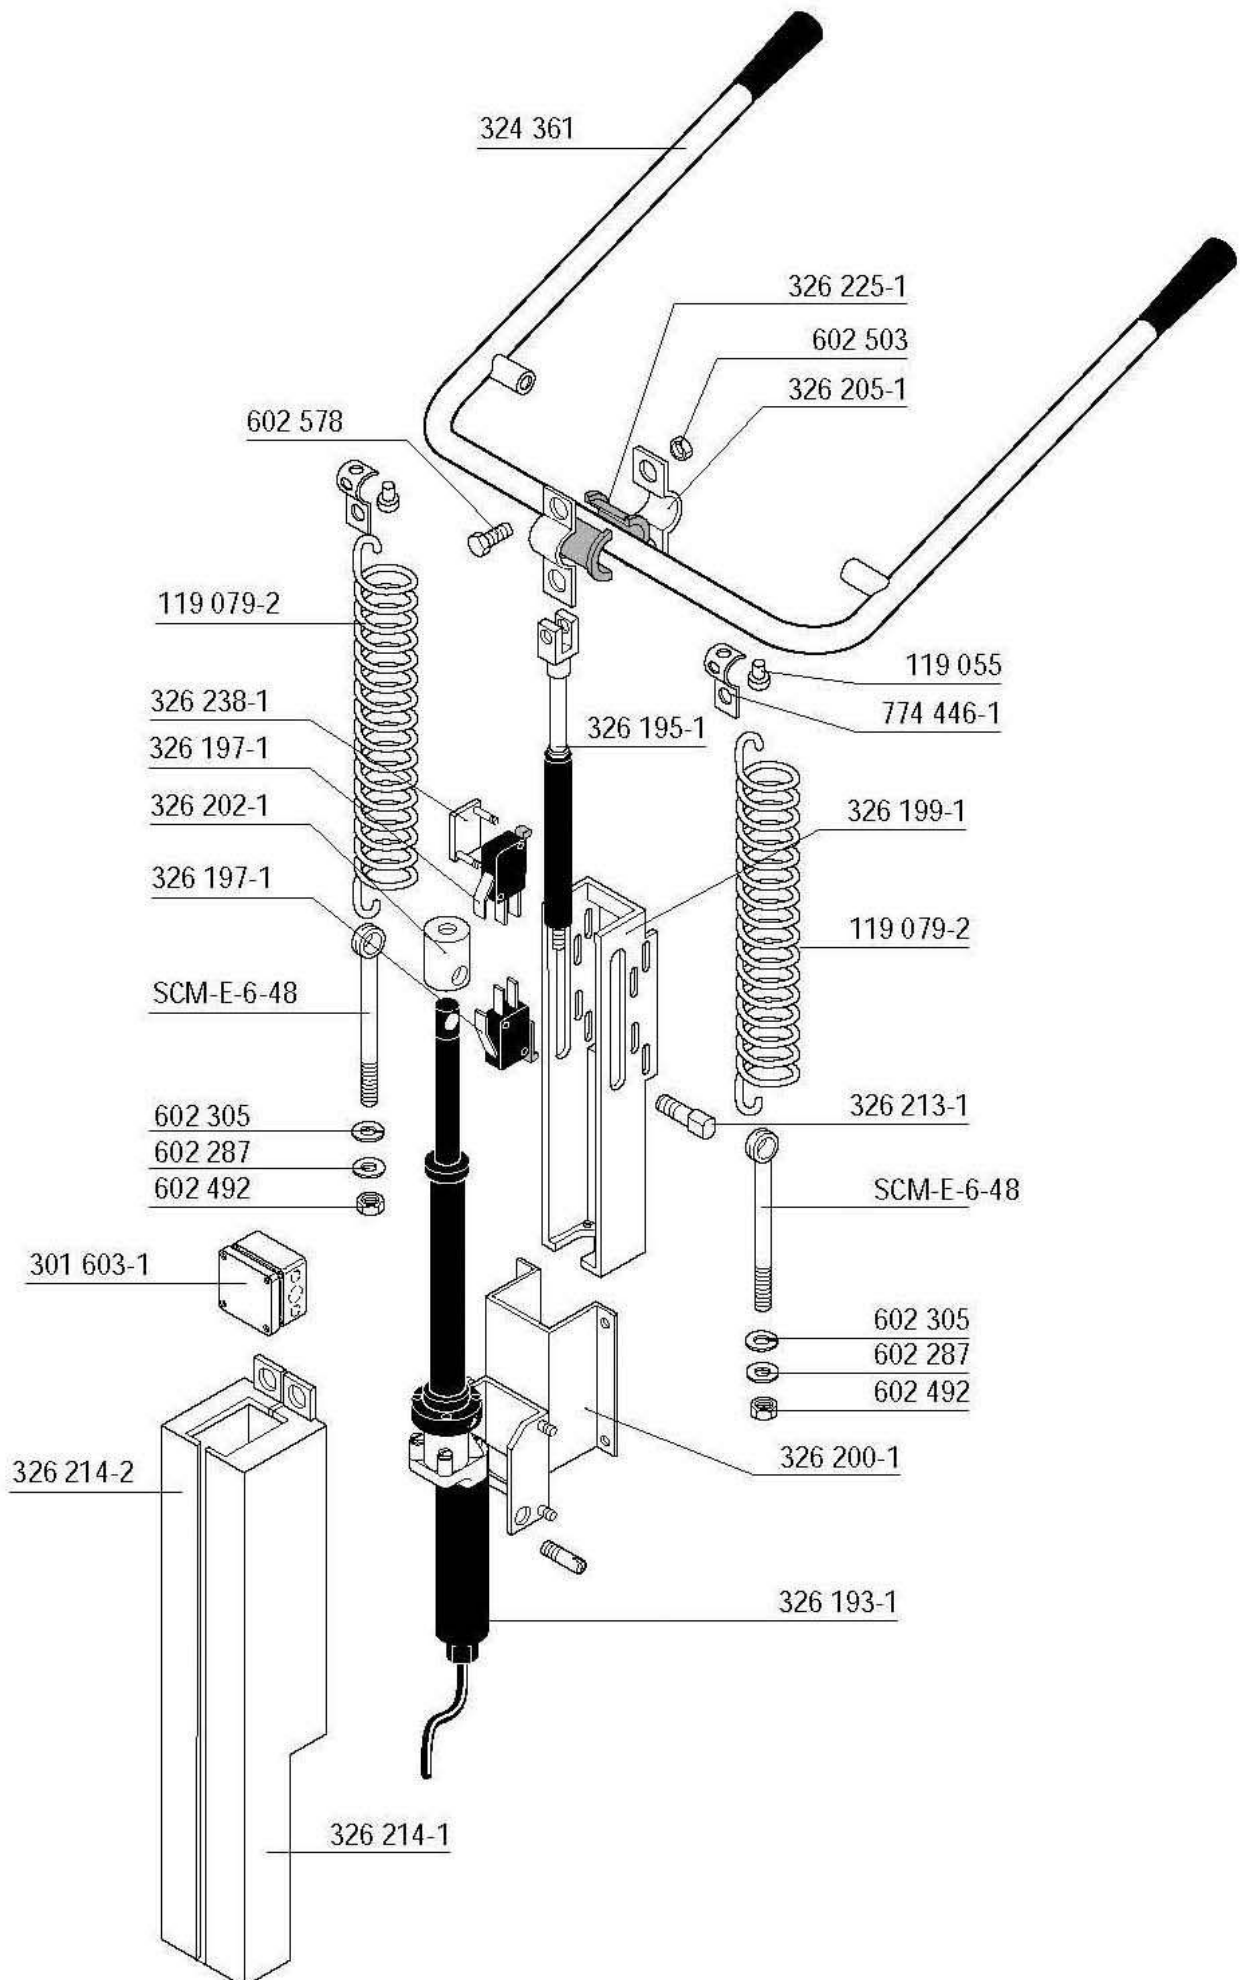


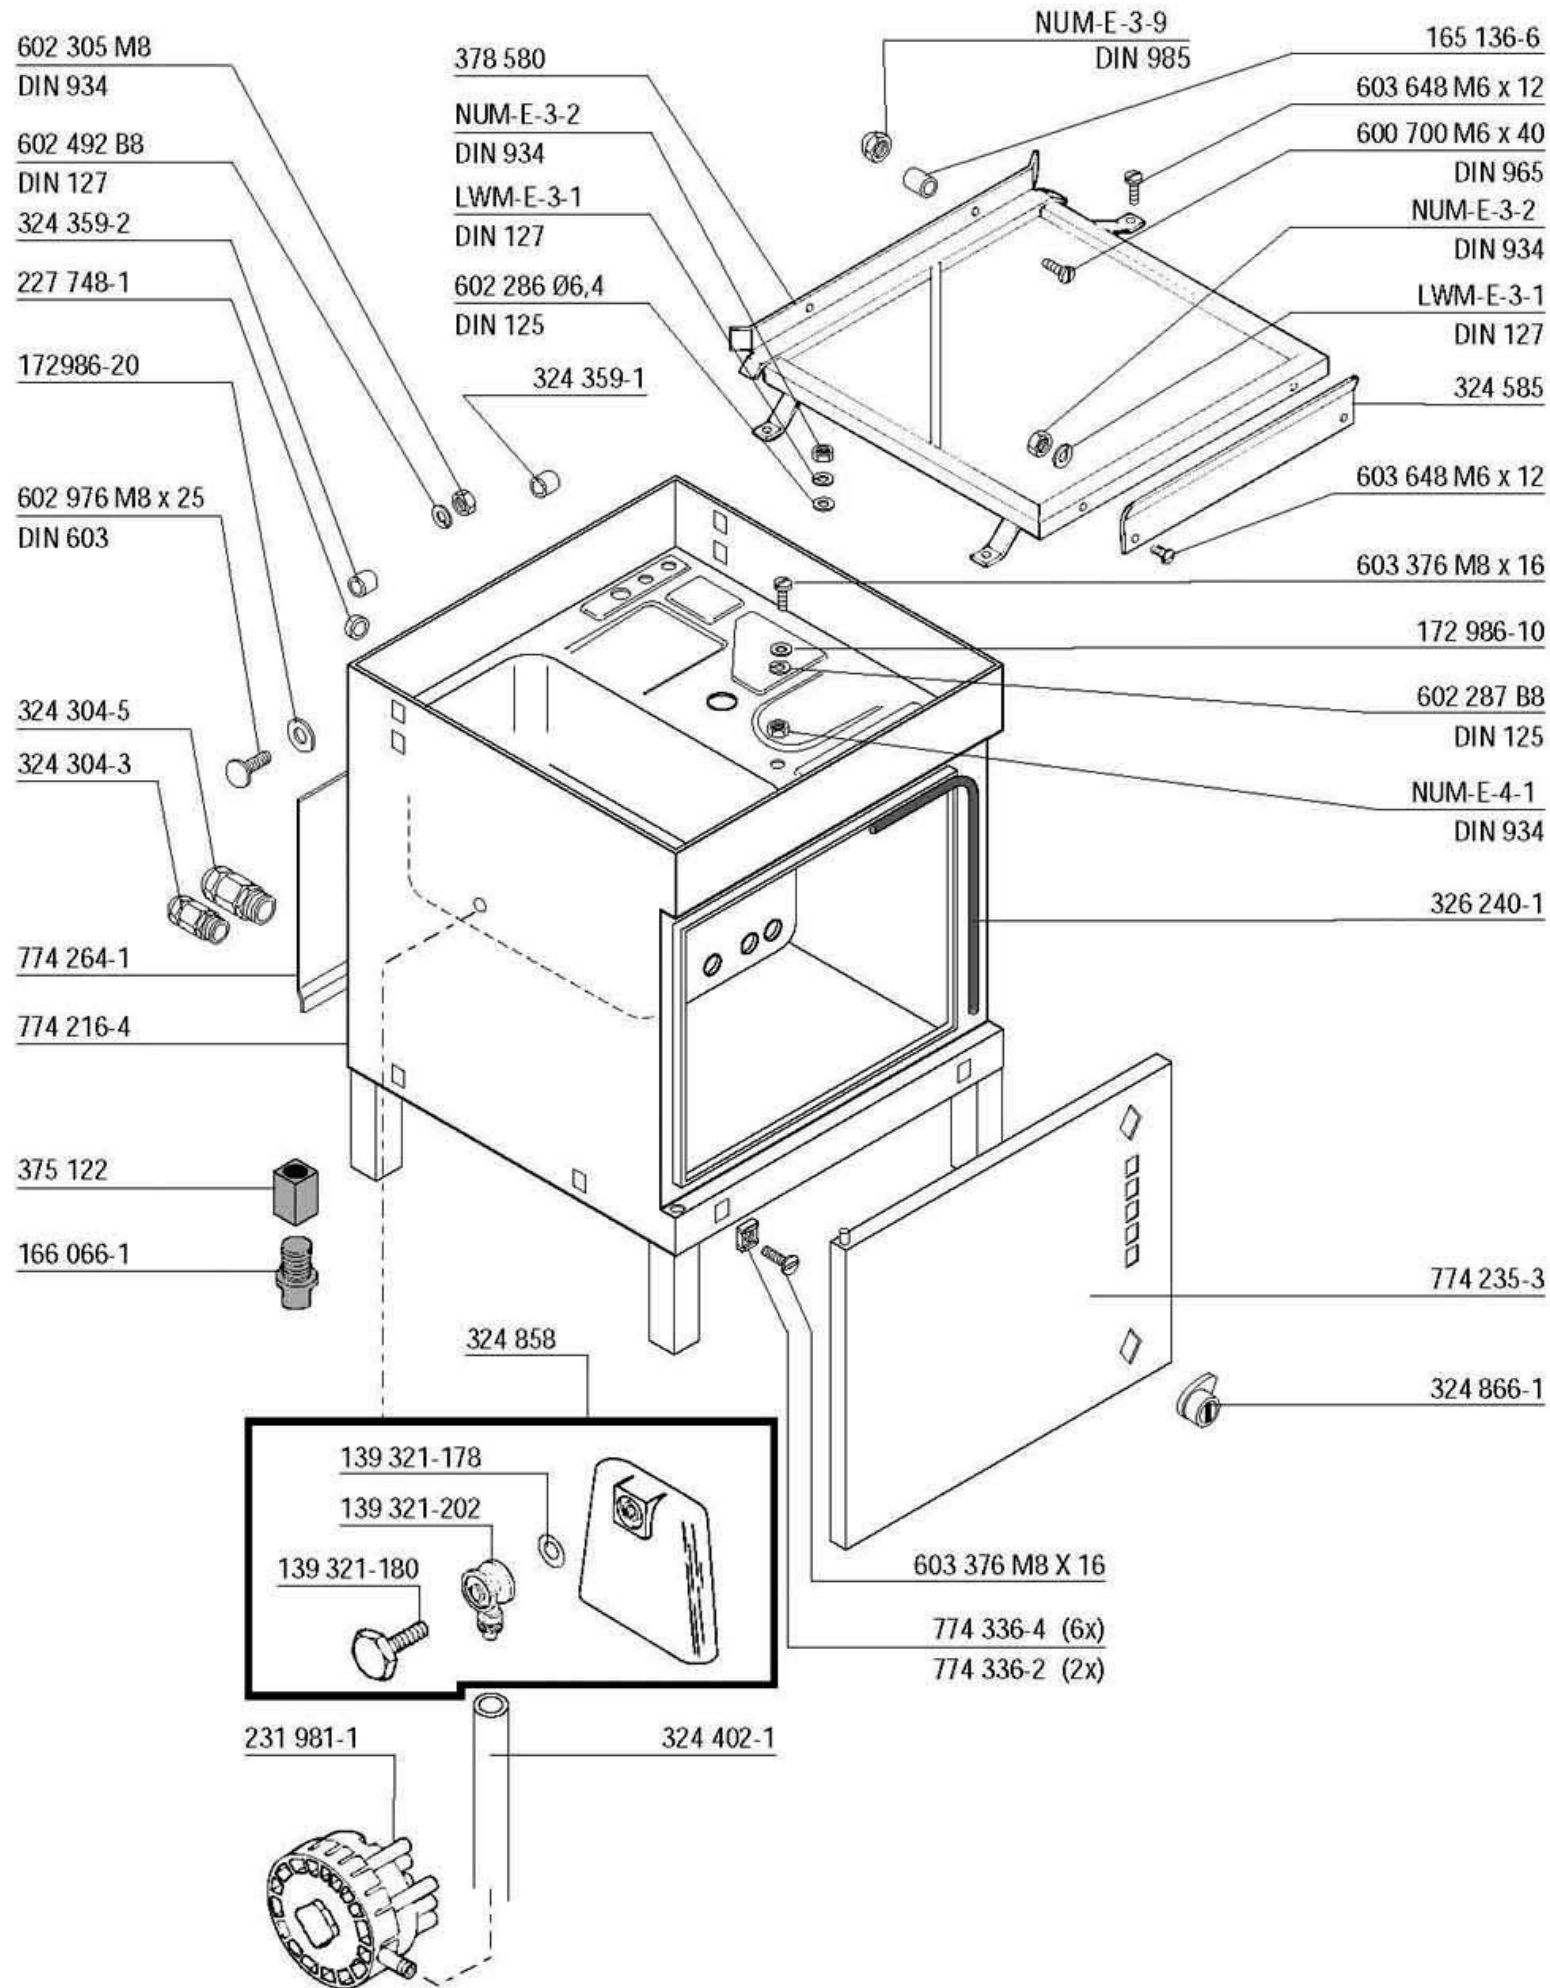

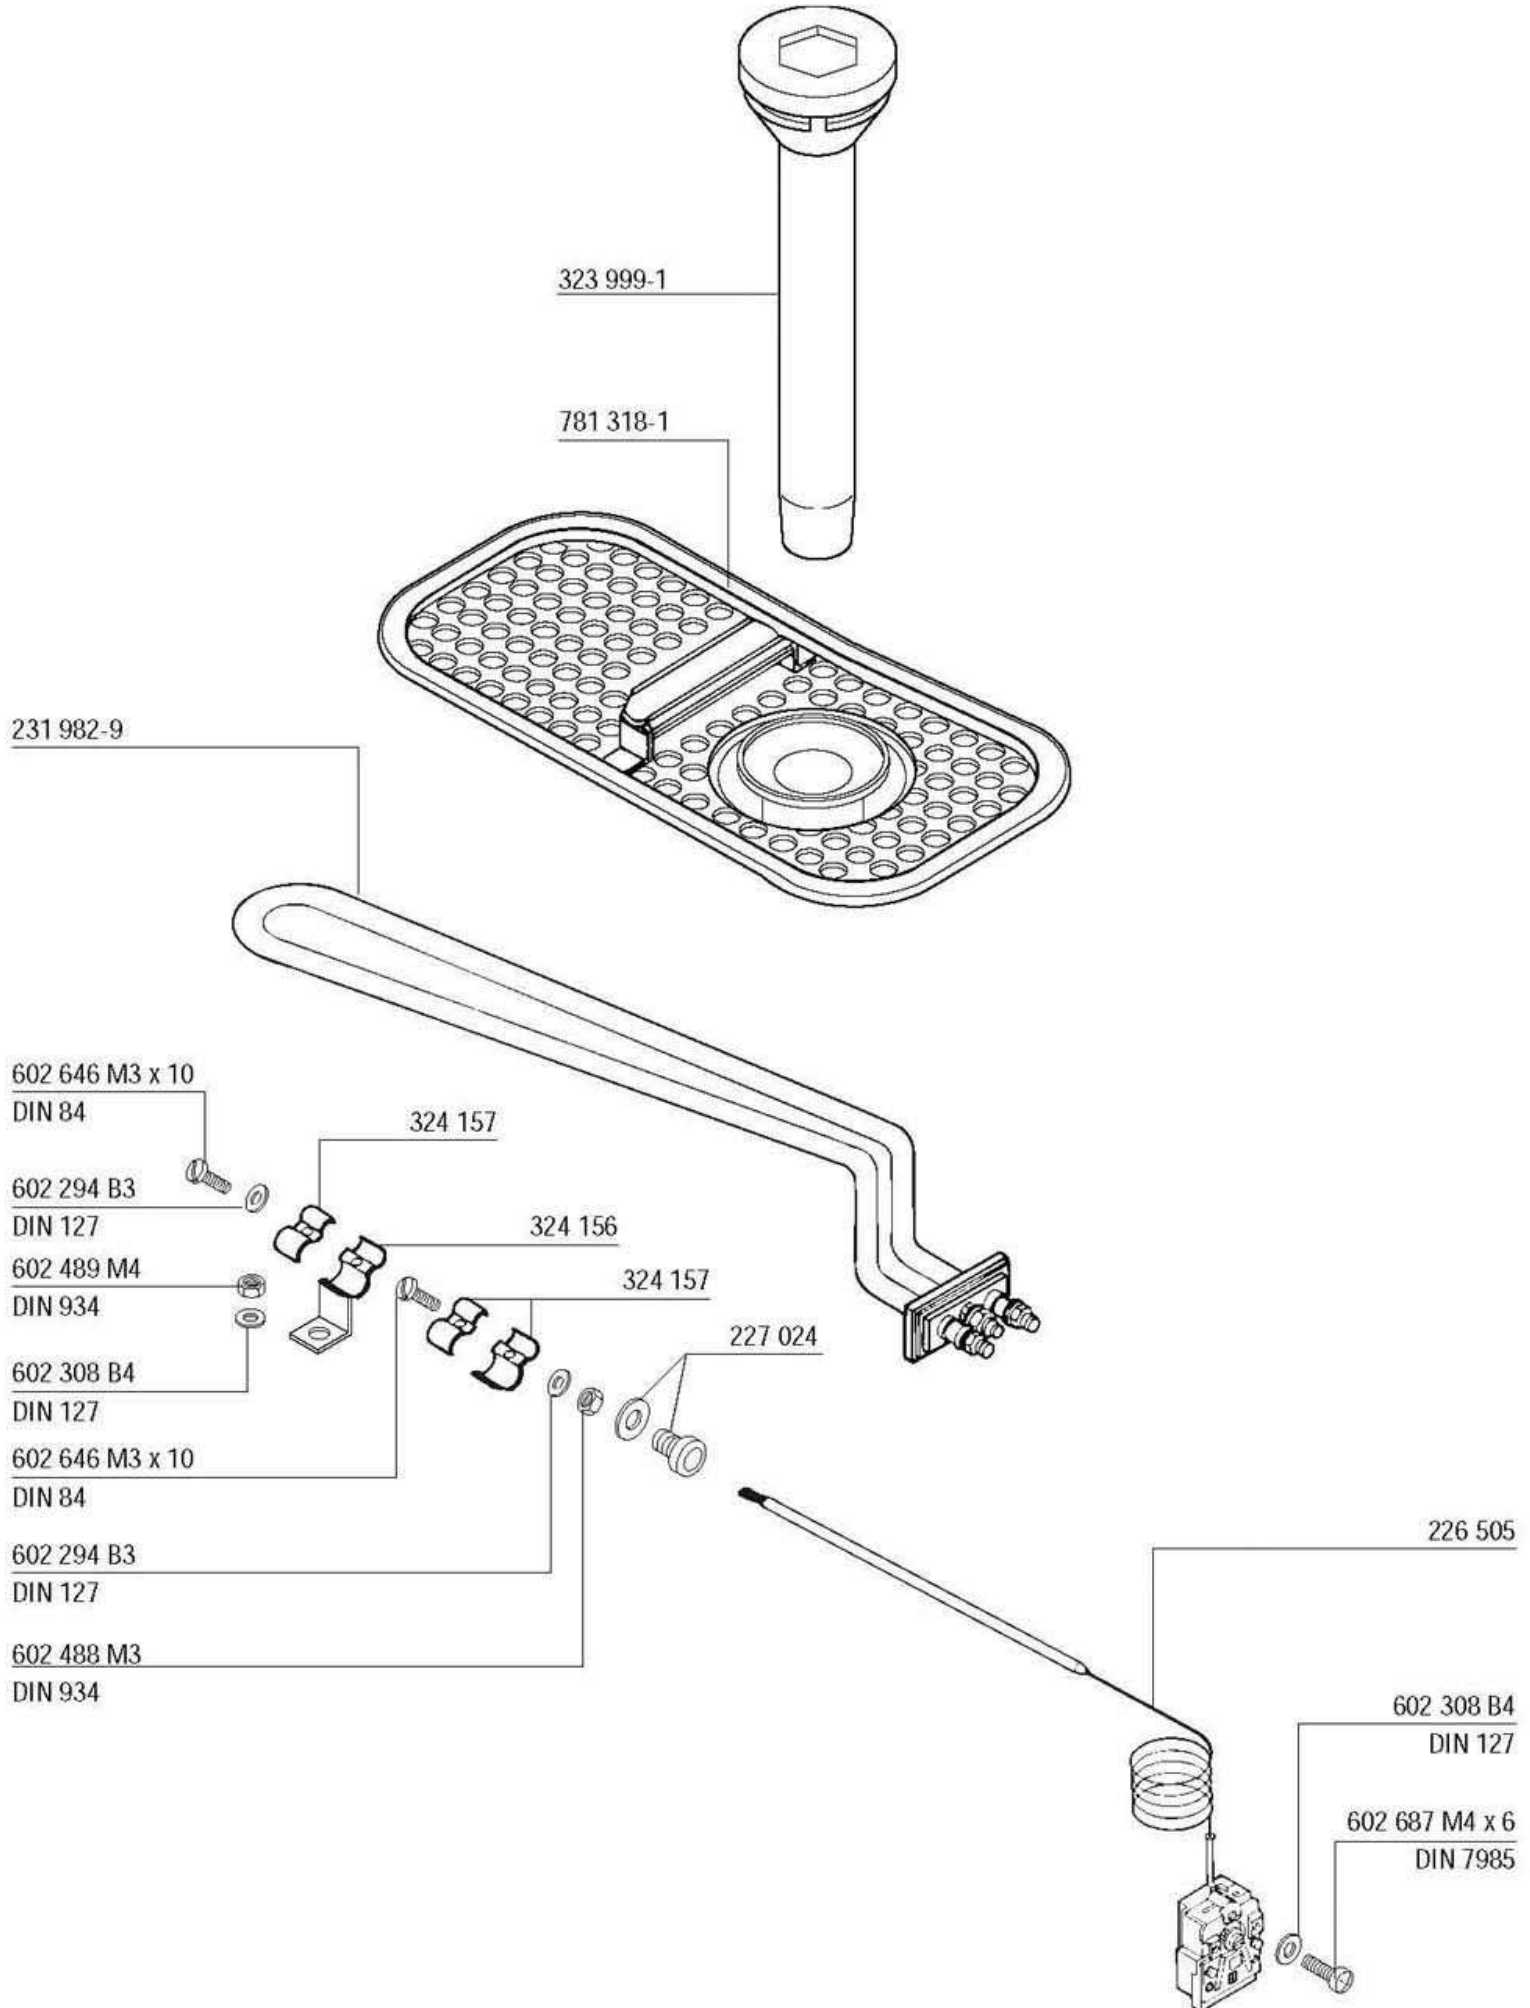

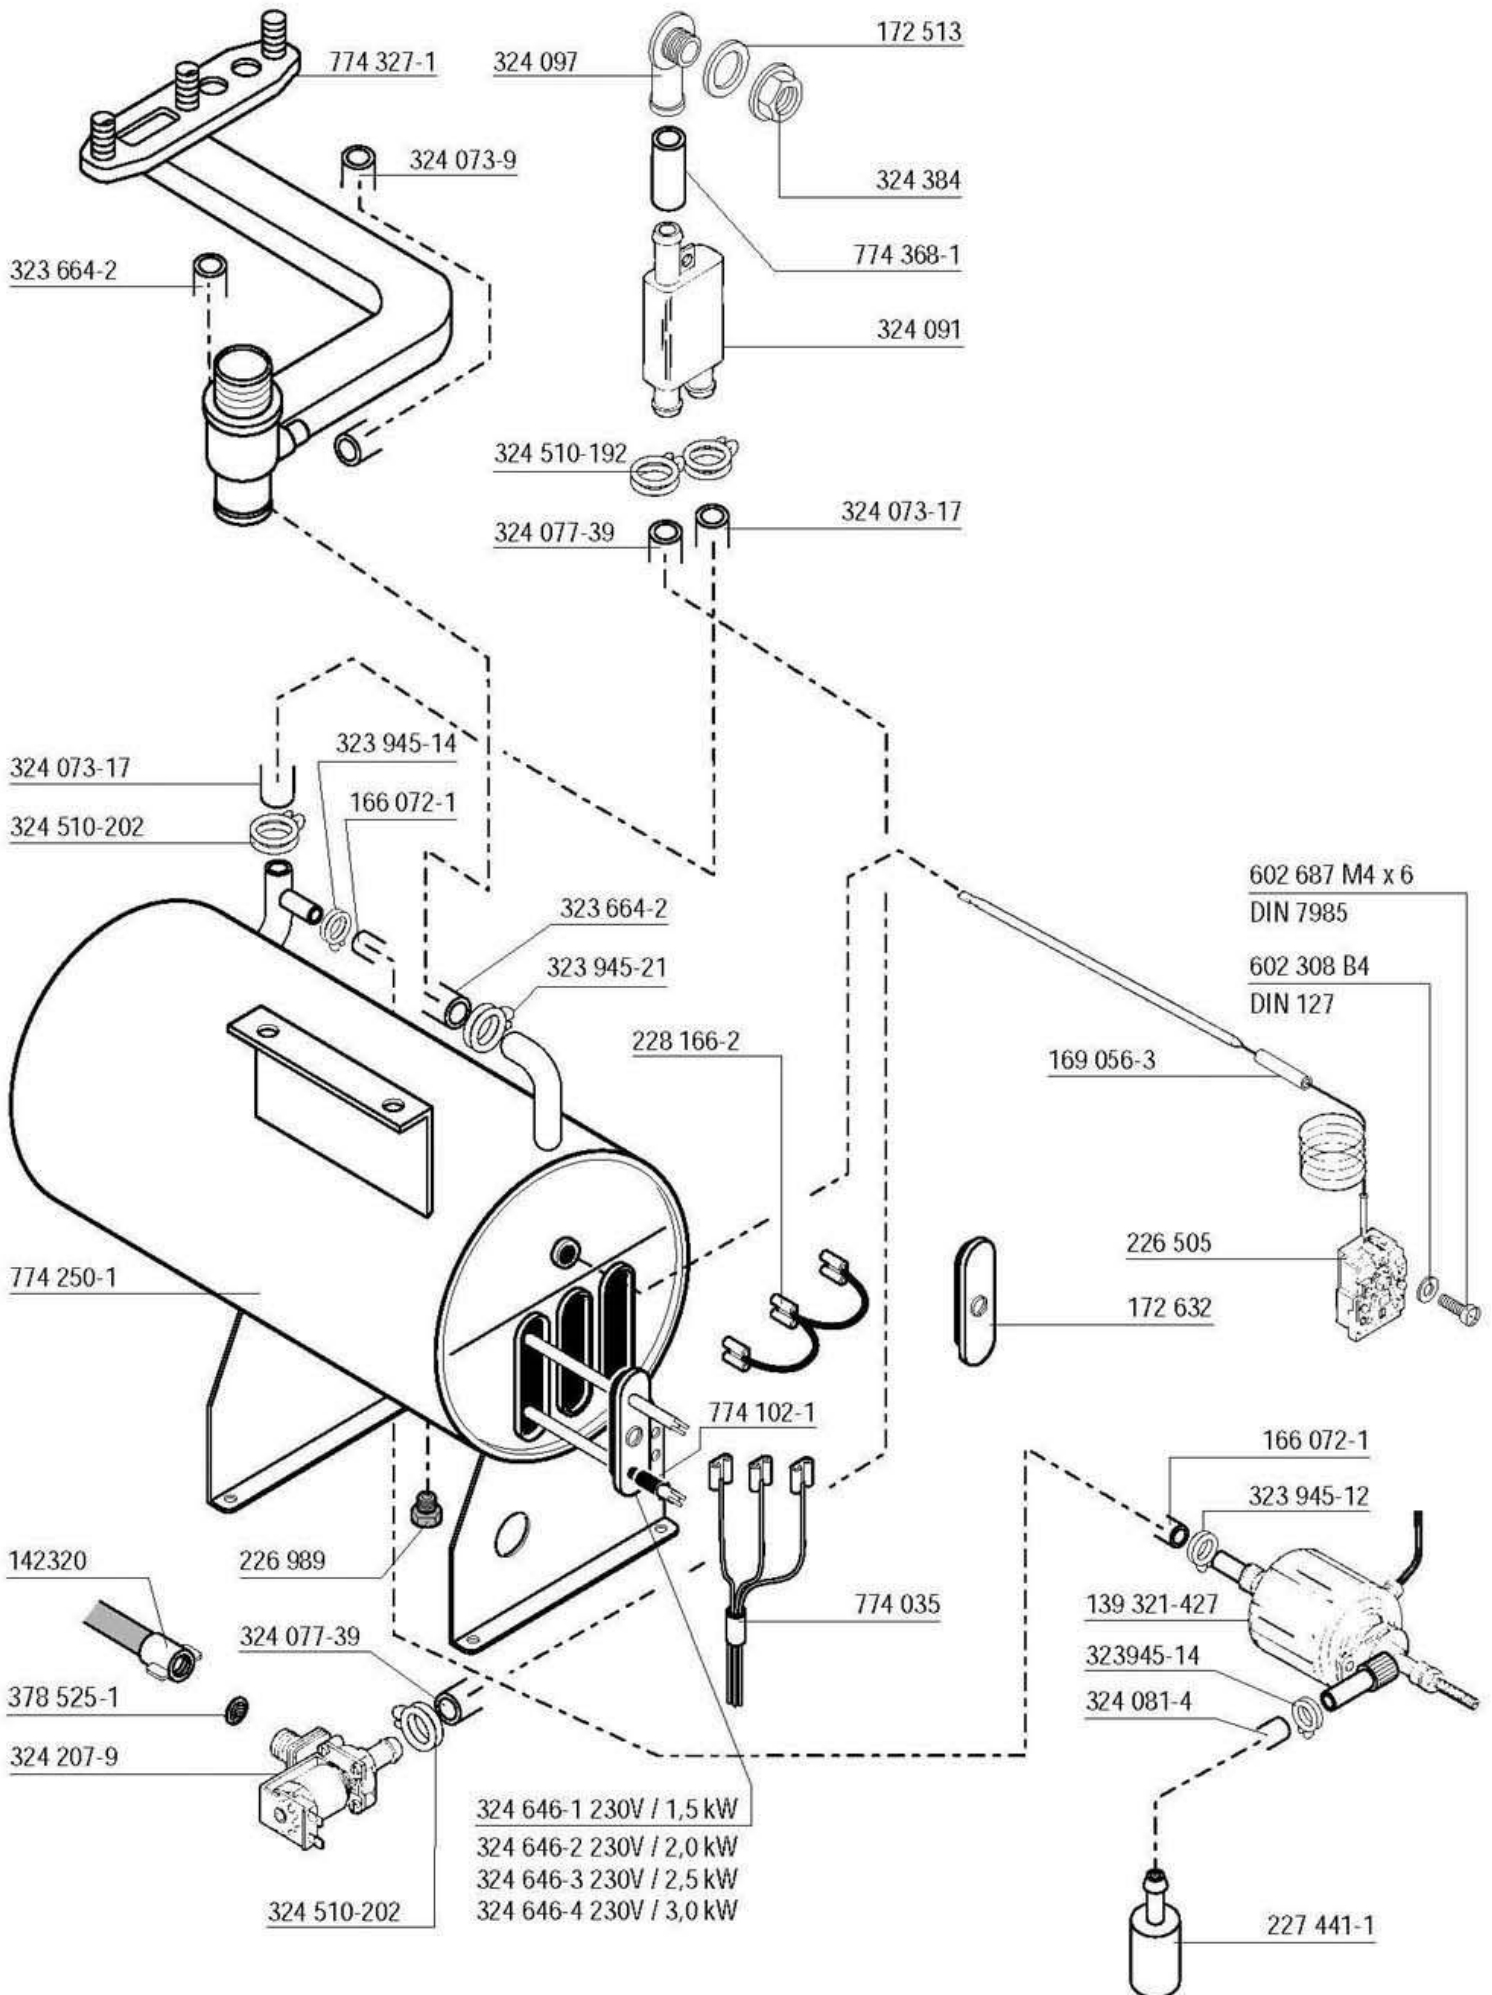

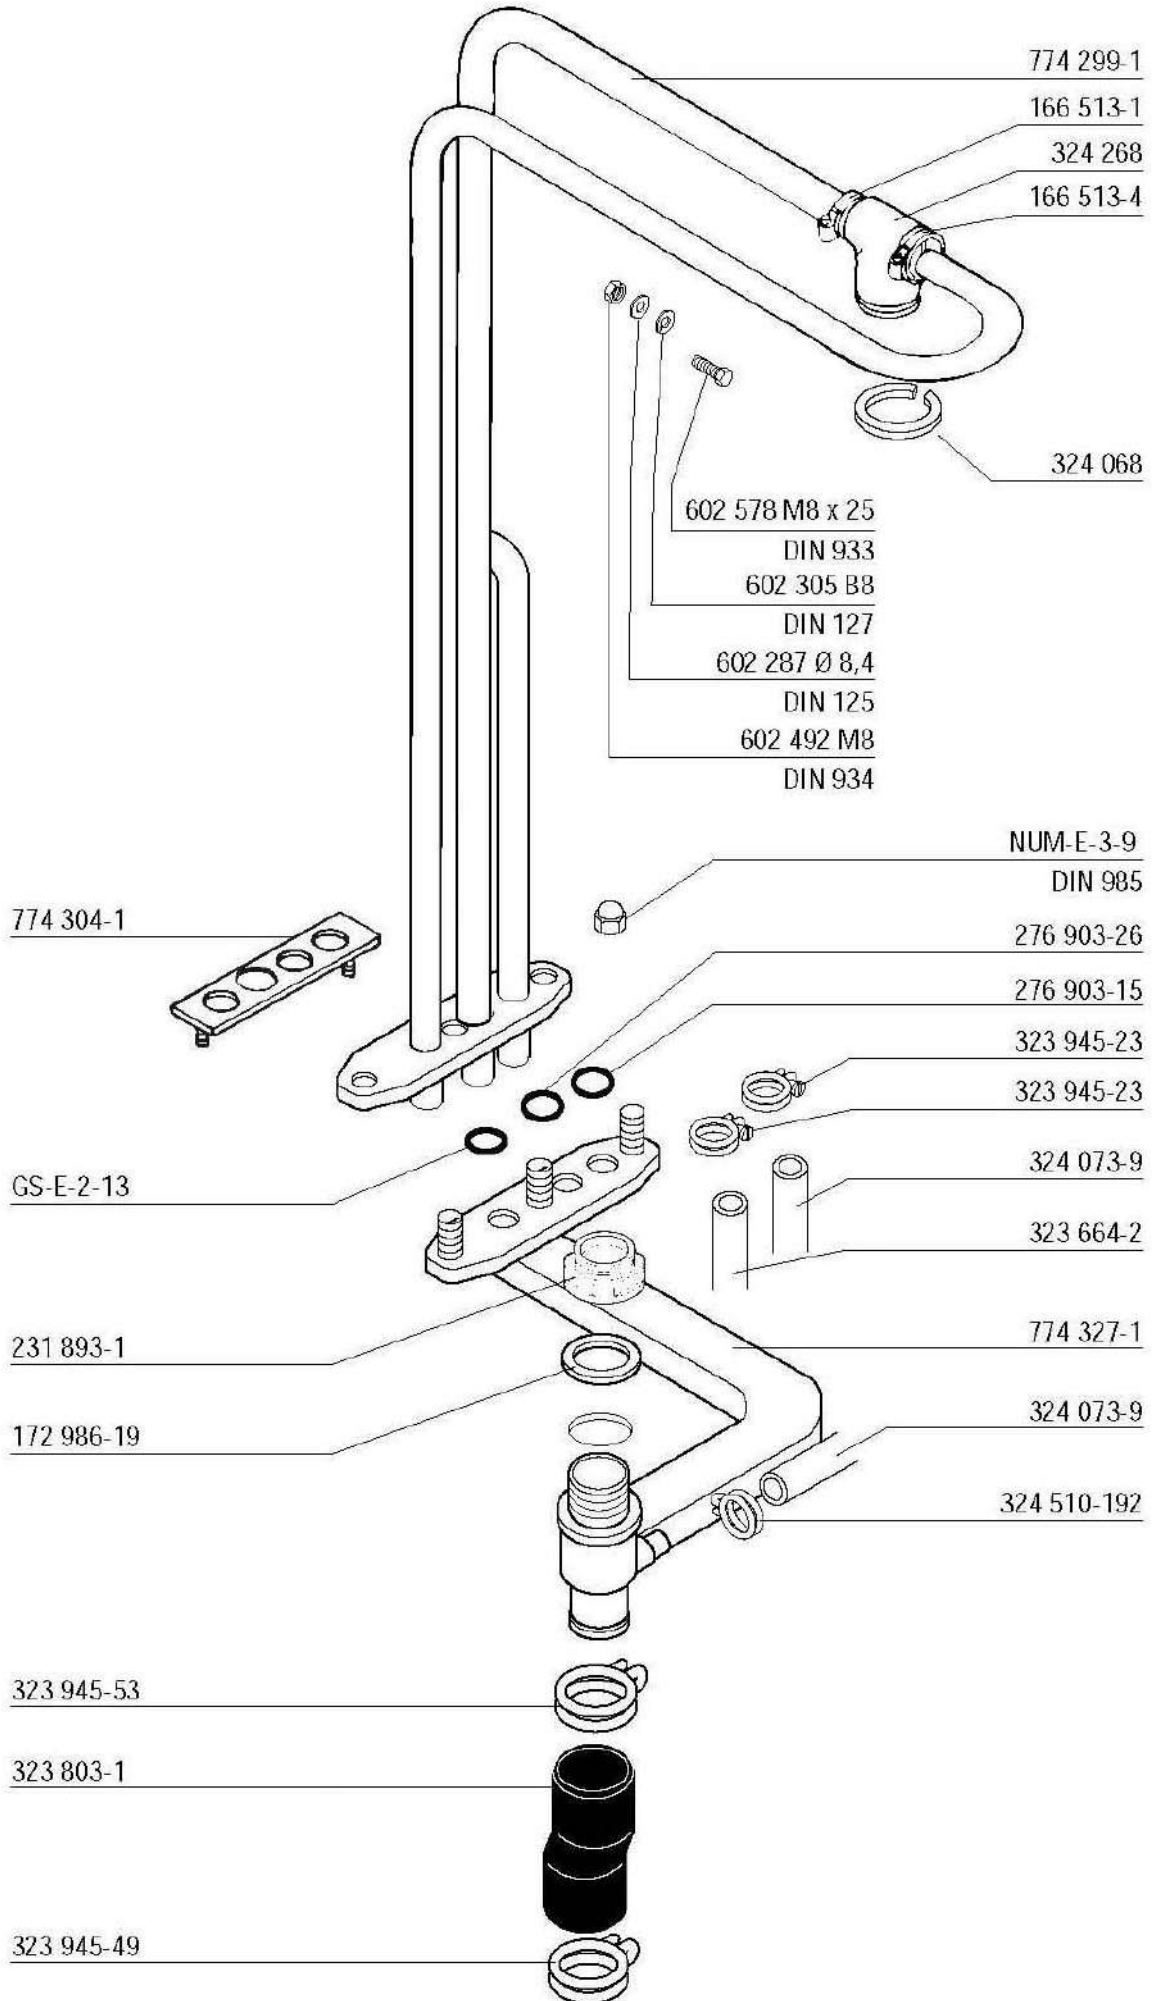

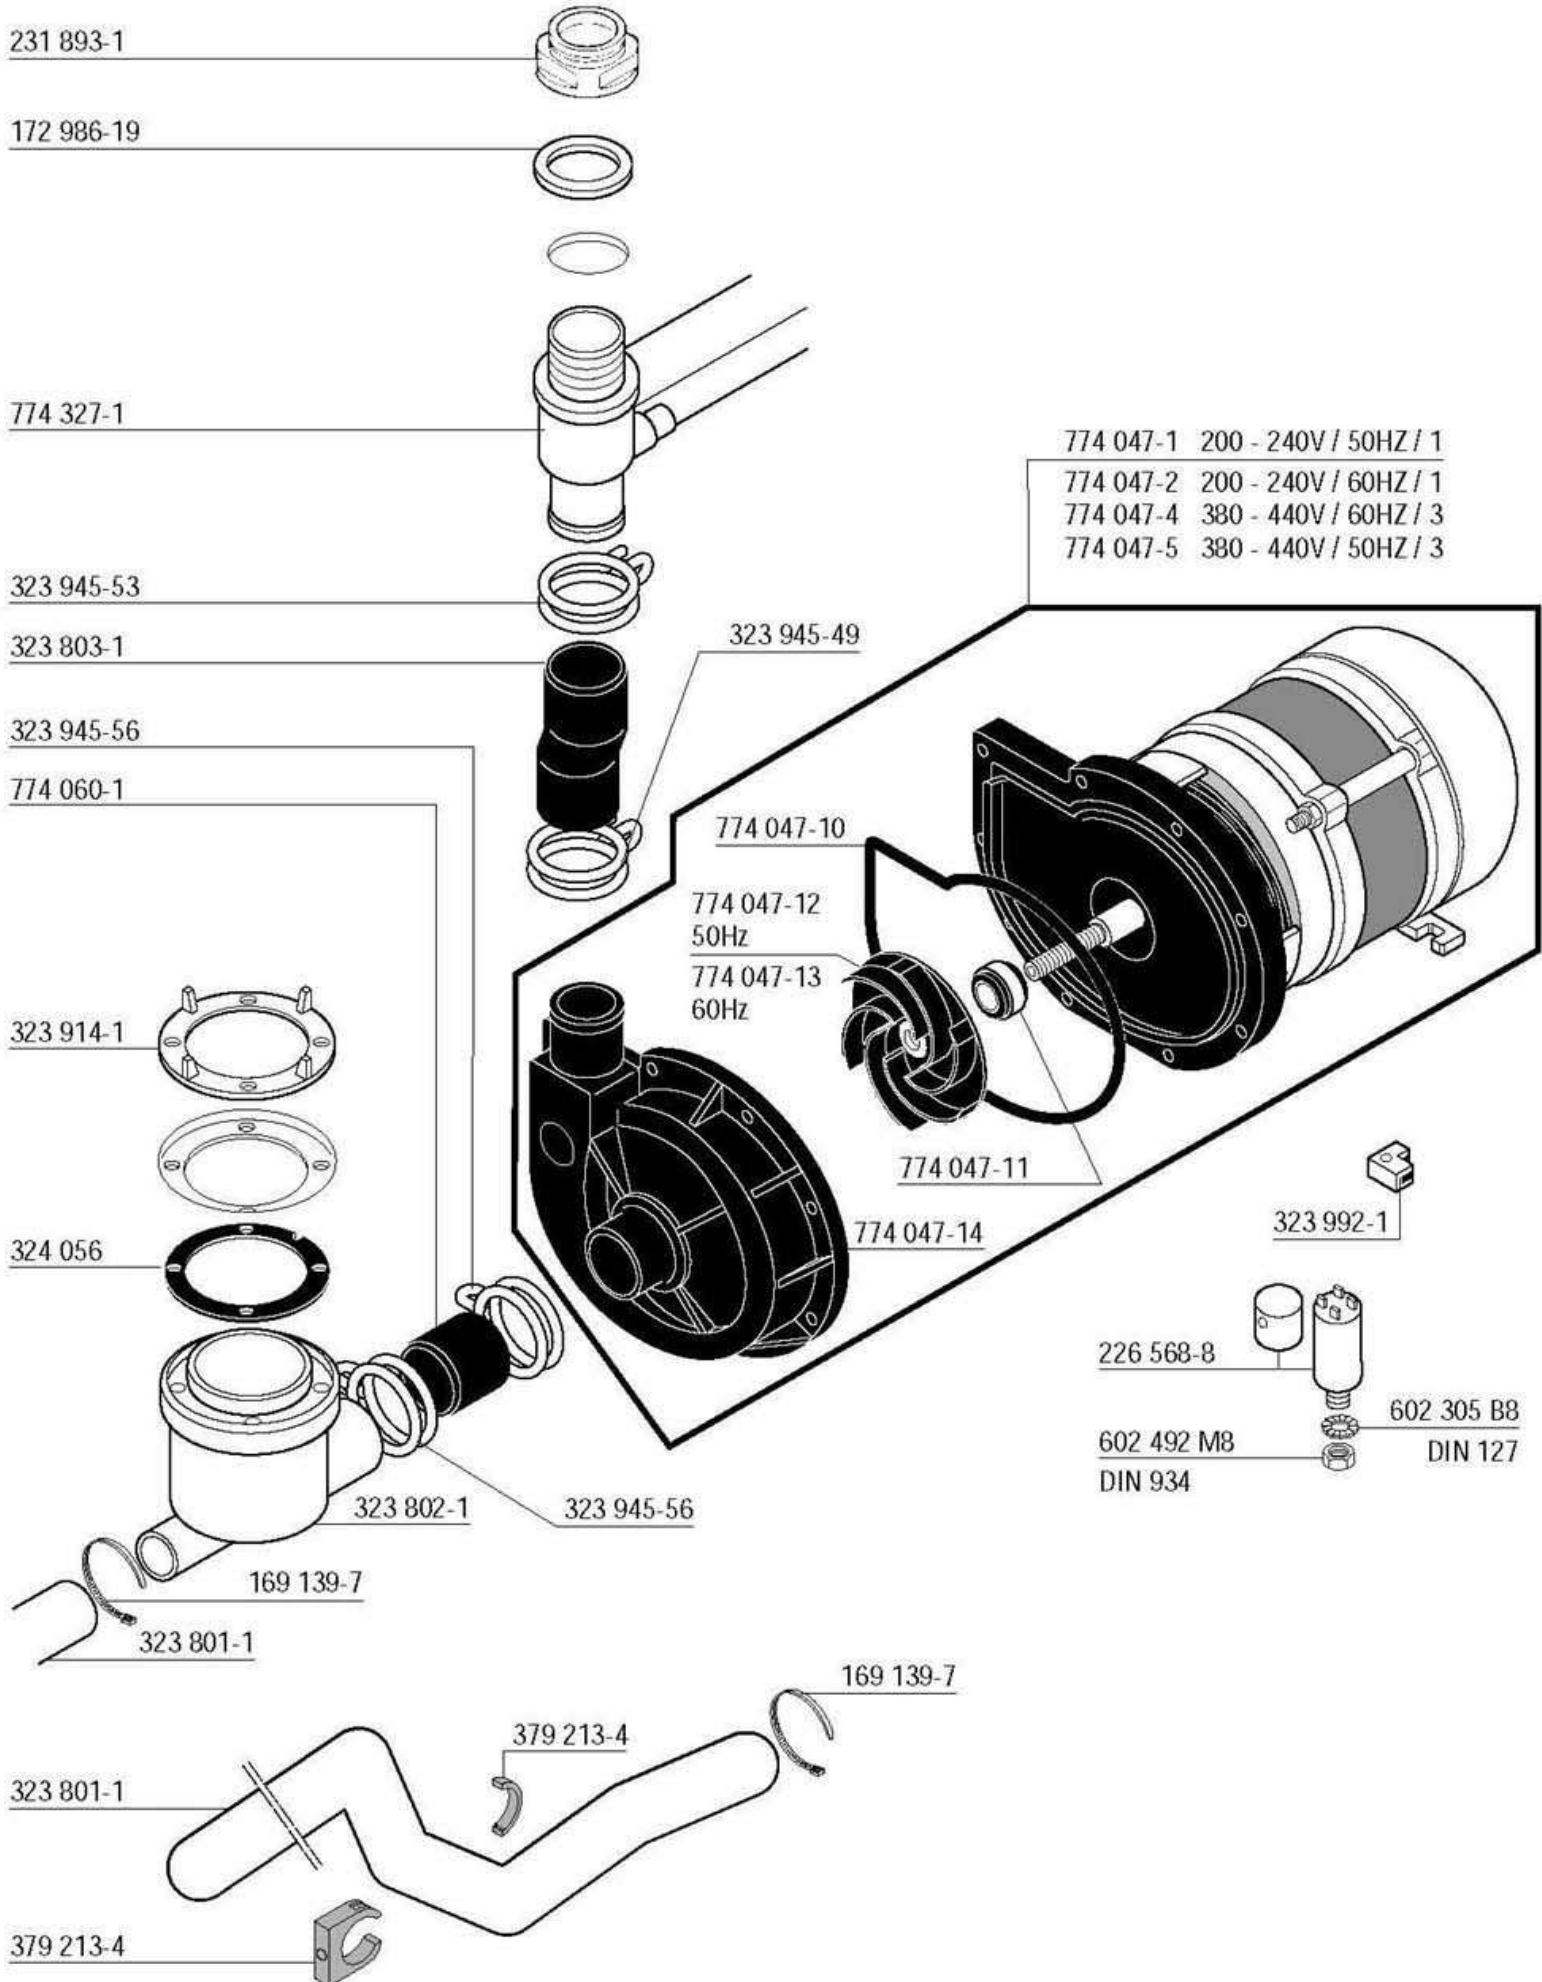

172 986-19

324444

323 805

324 172

324 036

324444


324 172

172 986-19

774 327-1

323 945-53

323 803-1

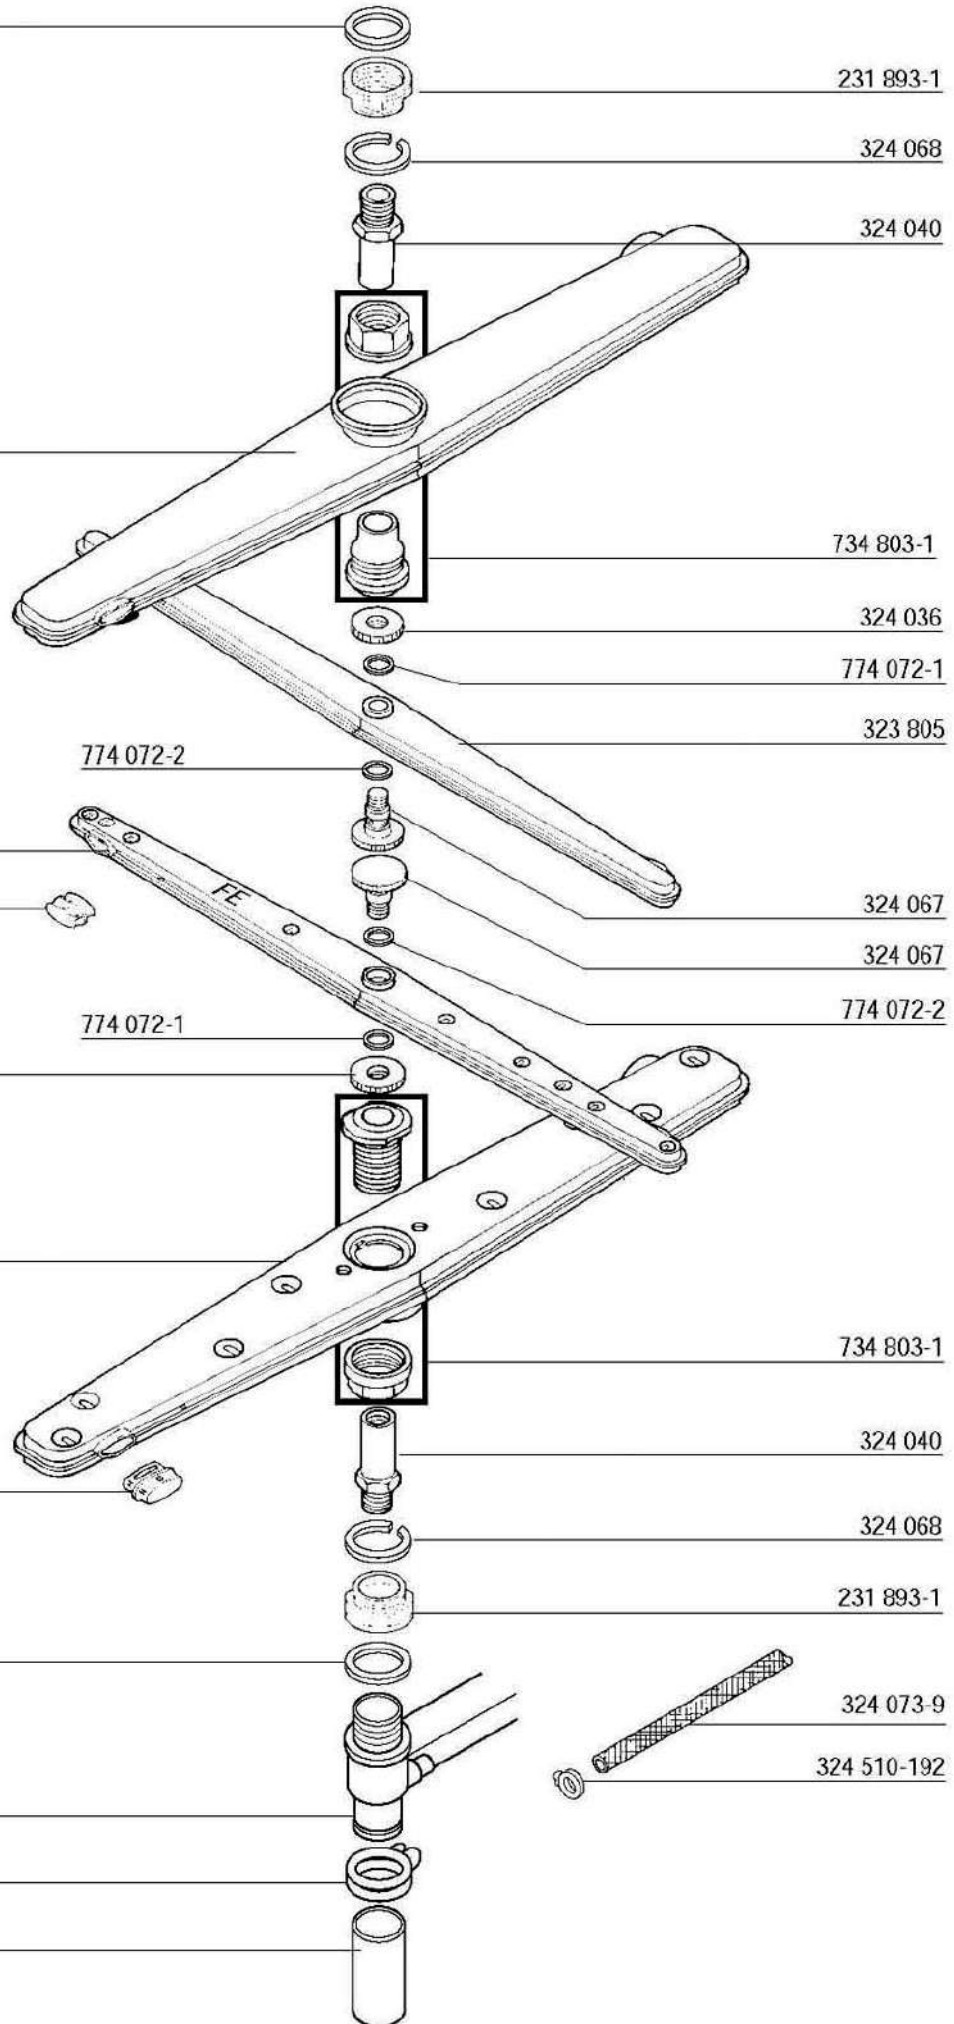

231 893-1

324 068

324 040

734 803-1

324 036

774 072-1

323 805

774 072-2

324 067

324 067

774 072-2

774 072-1

734 803-1

324 040

324 068

231 893-1


324 073-9


324 510-192



Drain pump (option)
Pompe de vidange (option)
Ablaufpumpe (nur auf Wunsch)
Afvoerpomp (option)

HE-HL

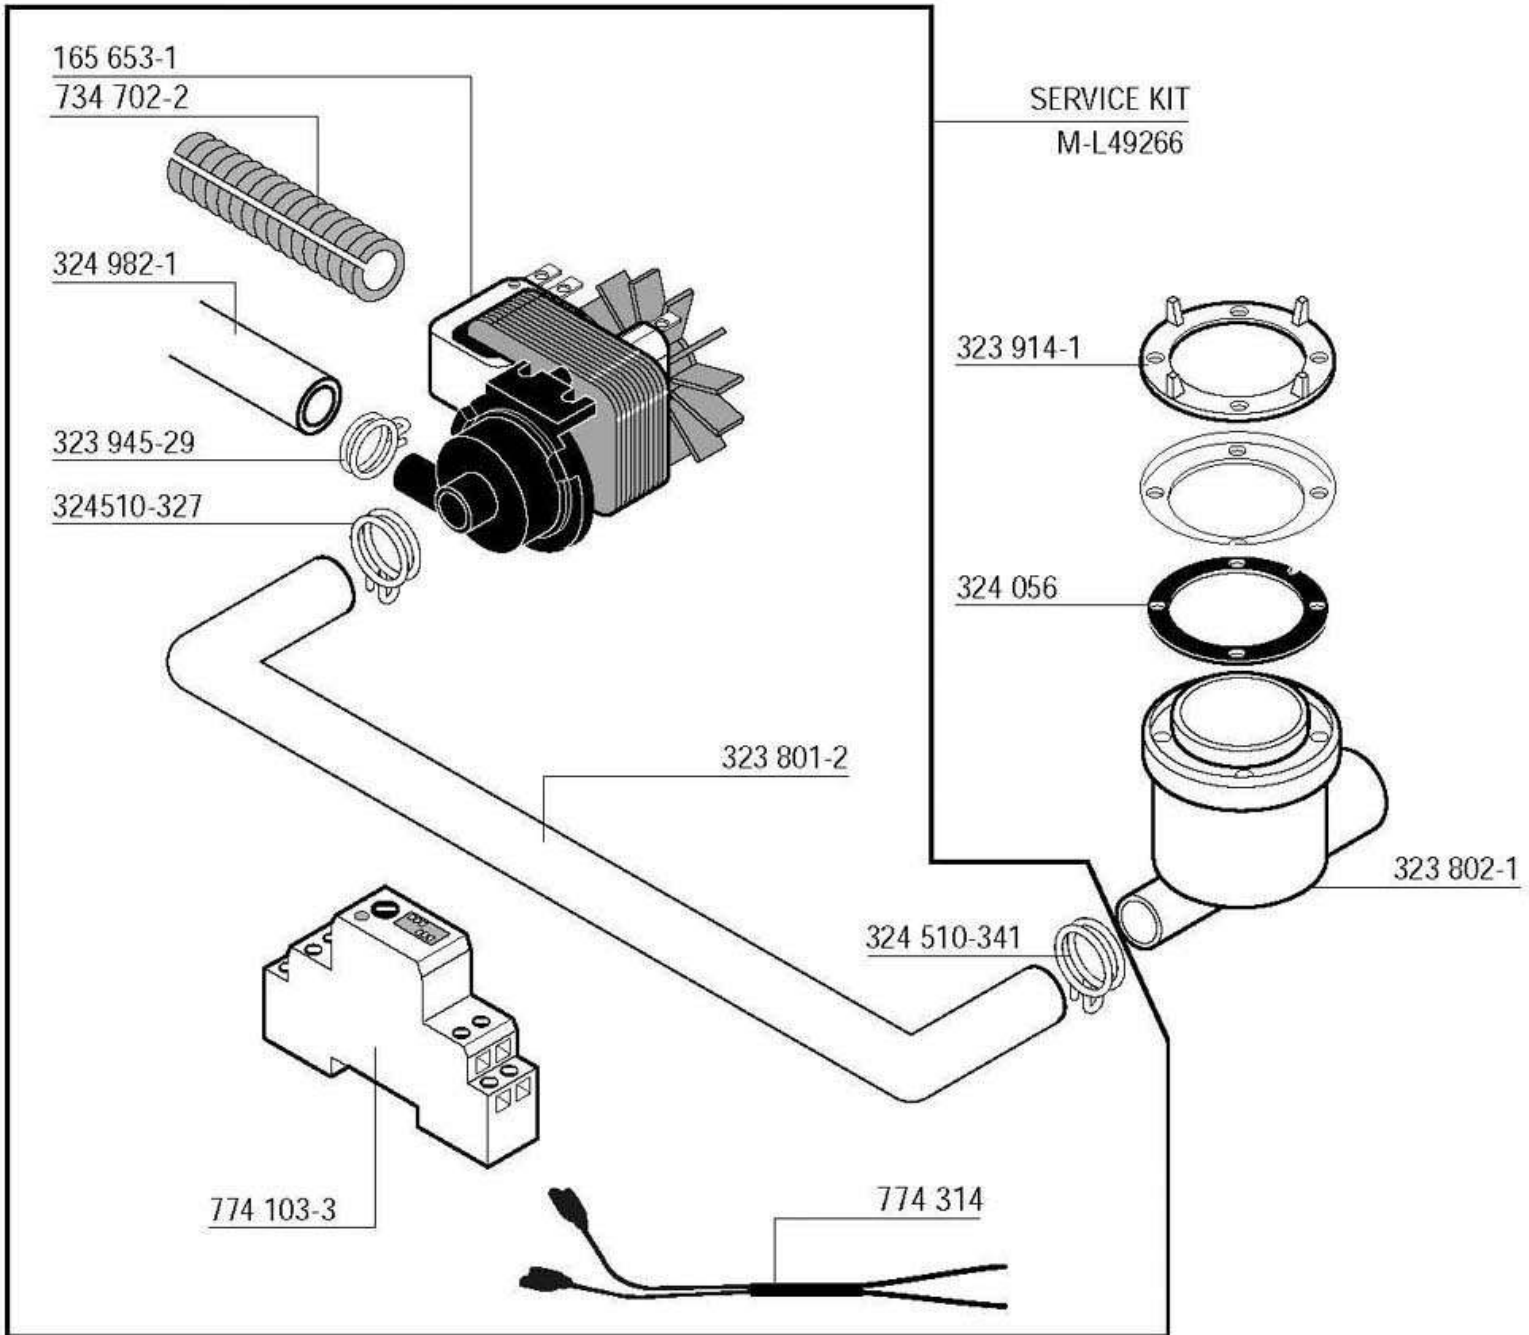

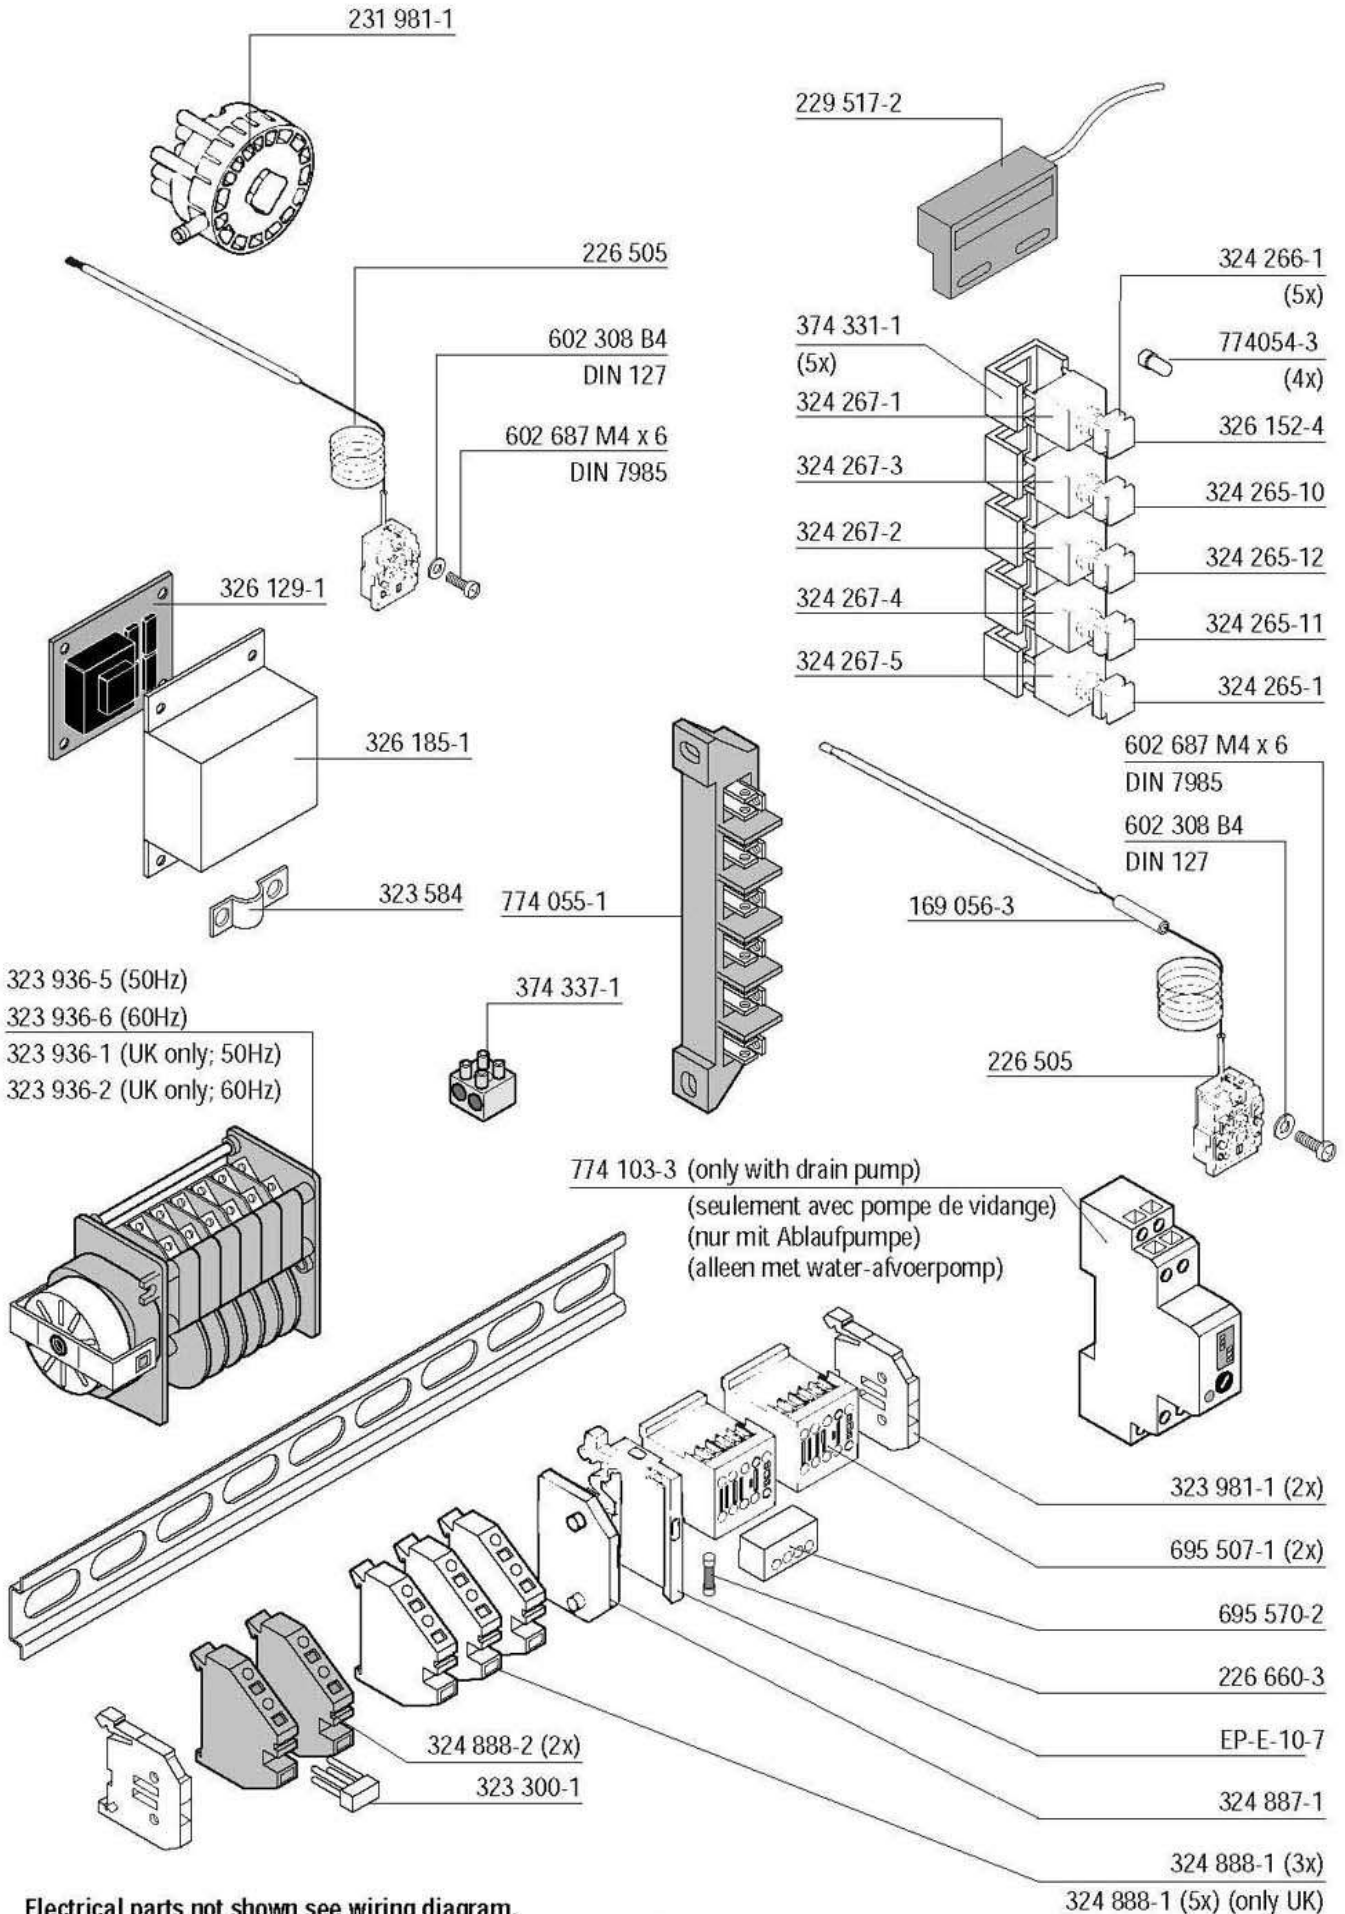

Electrical parts not shown see wiring diagram.

Pour pièces électriques non apparentes voir schéma de câblage.

Nicht gezeigte Elektroteile siehe Schaltplan.

Raadpleeg het elektrisch schema voor de niet afgebeelde elektrische componenten.