

CP: GAS AND ELECTRIC

CPG874-E-T-F-G-GG CPE874-T-F CPG1276-E-T-F-G-GG CPE1276-T-F

n°	ARTICLE	DESCRIPTION	PRICE
01	012817010	Cast iron pan support	€ 25,00
02	012817008	Thermocouple 600mm	€ 4,00
03	012817042	Spark Plug for cast iron burners (600mm)	€ 3,50
04	012837001	Ignition box (6 exits)	€ 6,50
05	012837002	Ignition box (4 exits)	€ 6,00
06	012817002	3,5 KW Burner Lid	€ 11,50
07	012817001	3,5 KW Burner Body	€ 10,00
08	012817003	3,5 KW Venturi mixing tube	€ 4,50
09	012817005	6 KW Burner Lid	€ 13,00
10	012817004	6 KW Burner Body	€ 11,50
11	012817006	6 KW Venturi mixing tube	€ 5,50
12	012817013	Nozzle Ø 1,40 for 3,5KW (Methane - Europe)	€ 0,50
	012817014	Nozzle Ø 1,85 for 6KW (Methane - Europe)	€ 0,50
	012817015	Nozzle Ø 0,92 for 3,5KW (30MBAR LPG - Europe, no DE,AT,CH)	€ 0,50
	012817016	Nozzle Ø 1,20 for 6KW (30MBAR LPG - Europe, no DE,AT,CH)	€ 0,50
	012817017	Nozzle Ø 0,80 for 3,5KW (50MBAR LPG - DE, AT, CH)	€ 0,50
	012817018	Nozzle Ø 1,05 for 6KW (50MBAR LPG - DE, AT, CH)	€ 0,50
	012817019	Nozzle Ø 1,30 for 3,5KW (Methane - DE L + HU)	€ 0,50
	012817020	Nozzle Ø 1,70 for 6KW (Methane DE L + HU)	€ 0,50
	012817021	Nozzle Ø 1,45 for 3,5KW (G25 Methane - The Netherlands)	€ 0,50
	012817022	Nozzle Ø 1,90 for 6KW (G25 Methane - The Netherlands)	€ 0,50
13	012817009	Nozzle holder	€ 5,50
14	012817025	Gas tap for 3,5KW***	€ 8,00
	012817035	Gas tap for 3,5KW (since May 2016)	€ 8,00
15	012817026	Gas tap for 6KW***	€ 8,00
	012817036	Gas tap for 6KW (since May 2016)	€ 8,00
16	012837036	Micro-switch chain for 4 burners	€ 6,50
17	012837038	Micro-switch chain for 6 burners	€ 6,50
18	012807051	Black knob for gas tap complete with adapter and blue label	€ 3,50
	012807071	Black knob for gas tap with blue label (since May 2016)	€ 3,50
19	012807061	Black knob for gas tap complete with adapter and grey label	€ 3,50
	012807081	Black knob for gas tap with grey label (since May 2016)	€ 3,50
20	012807066	Black knob for gas tap complete with adapter and red label	€ 3,50
	012807086	Black knob for gas tap with red label (since May 2016)	€ 3,50
21	012827006	Cast iron hotplate, Ø220mm, 2600W, 230V	€ 25,00
22	012827007	7-position switch for hotplates, 16A, 250V	€ 9,00
23	012827004	Power cable for Electric cookers and tops	€ 6,50
24	012827003	Terminal box for Electric cookers and tops	€ 5,00
25	012807055	Black knob for hotplates complete with adapter and blue label	€ 3,50
	012807075	Black knob for hotplates with blue label (since May 2016)	€ 3,50
26	012807065	Black knob for hotplates complete with adapter and grey label	€ 3,50

	012807085	Black knob for hotplates with grey label (since May 2016)	€	3,50
27	012807070	Black knob for hotplates complete with adapter and red label	€	3,50
	012807090	Black knob for hotplates with red label (since May 2016)	€	3,50
28	012807035	Support with roller for hinges	€	5,00
29	012807033	Right oven door hinge	€	7,00
30	012807034	Left oven door hinge	€	7,00
31	012807025	GN1/1 Oven grid	€	7,50
32	012807026	Right grid/tray holder for GN1/1 oven	€	9,00
33	012807027	Left grid/tray holder for GN1/1 oven	€	9,00
34	012805001	Fixing screw for grid/tray holders	€	1,50
35	012807028	Oven door seal for GN1/1 oven	€	7,00
36	012807036	Oven door handle	€	16,50
37	012805029	Complete Oven door (with handle and hinges)	€	85,00
38	018237011	Equipotential earthing terminal	€	2,00
39	018237009	Power cable for gas cookers and tops	€	4,00
40	018237008	Terminal box for gas cookers and tops	€	3,50
41	012807032	Stainless steel foot, adjustable in height, for cookers	€	4,00
42	002307007	Stainless steel foot, adjustable in height, for Tops	€	2,50
43	018237001	3000W Round heating element	€	15,00
44	018237012	Complete fan motor with fan for electric ovens	€	20,00
45	018237004	M6 Fan fixing nut	€	0,50
46	018237003	Stainless steel fan, 7 blades	€	5,50
47	018237014	Guard disk for fan motor insulation	€	2,00
48	018237005	Orange indicator light	€	0,75
49	018237006	Green indicator light	€	0,75
50	018237002	1 bulb thermostat (0-270°C)	€	15,00
51	018237007	MTS57 timer (120')	€	15,00
52	012807053	Black knob for el. thermostat complete with adapter and blue label	€	3,50
	012807073	Black knob for el. thermostat with blue label (since May 2016)	€	3,50
53	012807063	Black knob for el. thermostat complete with adapter and grey label	€	3,50
	012807083	Black knob for el. thermostat with grey label (since May 2016)	€	3,50
54	012807068	Black knob for el. thermostat complete with adapter and red label	€	3,50
	012807088	Black knob for el. thermostat with red label (since May 2016)	€	3,50
55	012807052	Black knob for timer complete with adapter and blue label	€	3,50
	012807072	Black knob for timer with blue label (since May 2016)	€	3,50
56	012807062	Black knob for timer complete with adapter and grey label	€	3,50
	012807082	Black knob for timer with grey label (since May 2016)	€	3,50
57	012807067	Black knob for timer complete with adapter and red label	€	3,50
	012807087	Black knob for timer with red label (since May 2016)	€	3,50
58	012807109	Burner for GN1/1 gas oven (complete with TC and spark plug)	€	20,00
59	012807101	Nozzle holder for gas oven	€	5,00
60	012817023	Nozzle Ø 1,60 for gas oven (Methane - all Europe)	€	0,50
	012817024	Nozzle Ø 1,02 for gas oven (LPG - all Europe)	€	0,50
61	012807105	Ignition box for GN1/1 gas oven (2 exits)	€	5,50
62	012807110	Burner for GN1/1 gas grill (complete with TC and spark plug)	€	25,00
63	012807111	1-way thermostat for GN1/1 gas oven	€	18,00
64	012807112	2-way thermostat for GN1/1 gas oven with gas grill	€	21,00
65	012807054	Black knob for gas oven complete with adapter and blue label	€	3,50
	012807074	Black knob for gas oven with blue label (since May 2016)	€	3,50
66	012807064	Black knob for gas oven complete with adapter and grey label	€	3,50

	012807084	Black knob for gas oven with grey label (since May 2016)	€	3,50
67	012807069	Black knob for gas oven complete with adapter and red label	€	3,50
	012807089	Black knob for gas oven with red label (since May 2016)	€	3,50

*** These gas taps are out of stock

The difference between new and old ones is the 0 position of shaft. For the cookers produced before May 2016 it is possible to use the new gas taps simply removing the adapter from knob, rotate it in order to make it match with gas tap shaft, and place it back into the knob in this position.

DRAFT VERSION

Piano Gas / Gas Hob



02



03



 
04

6 EXITS



05

4 EXITS

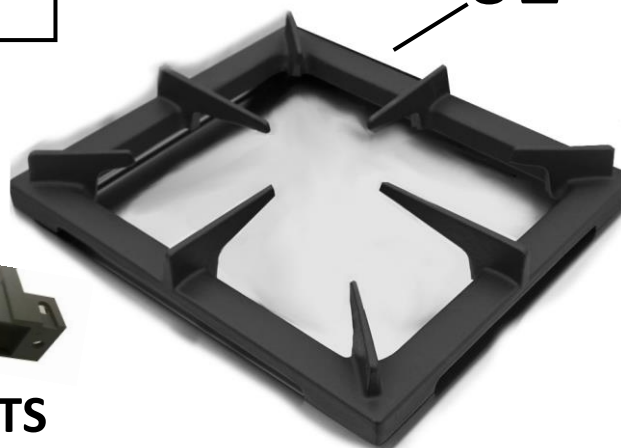

01

09



10



16

4 BURNERS

17

6 BURNERS



06



07

11



12



08

15

6KW



13



14

3,5KW



18

Blue



19

 
 
Grey



20

Red

Piano Piastre Elettriche / Electric Hotplate Hob

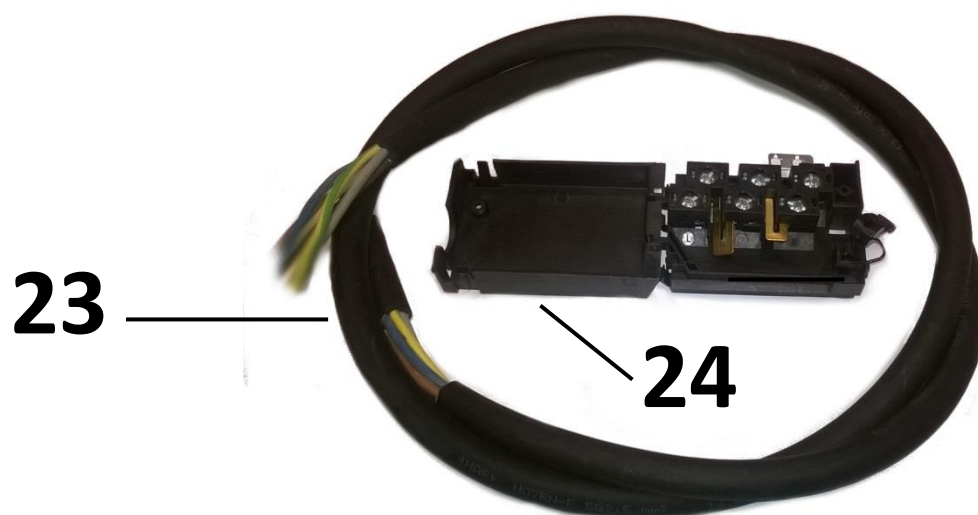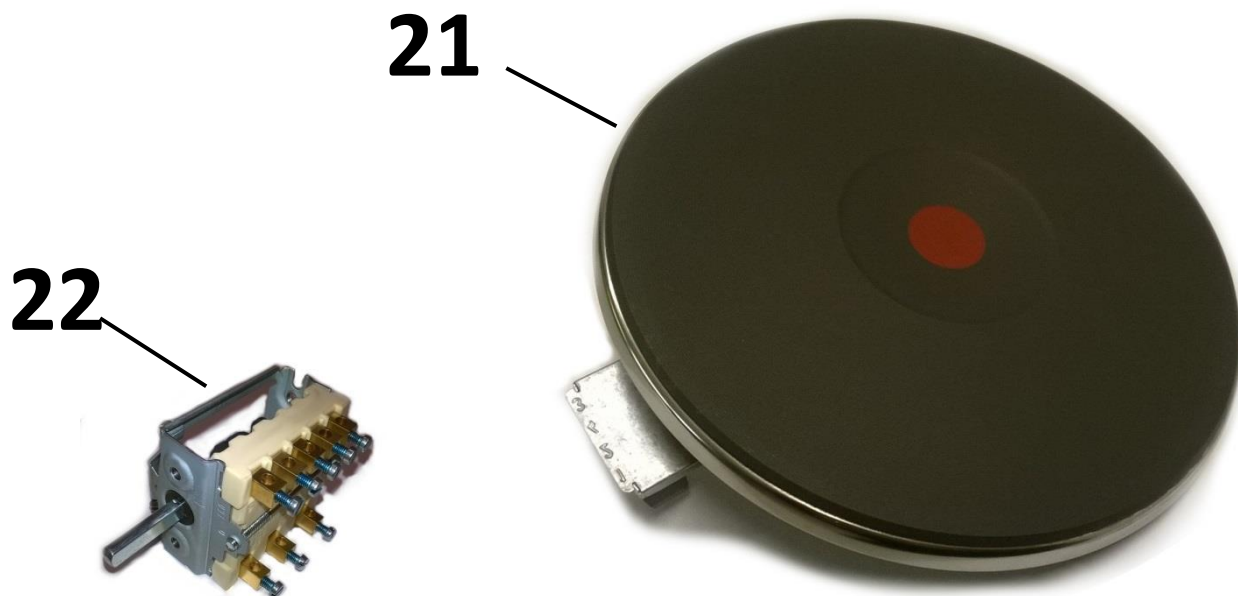

Accessori / Accessories

 


Forno Elettrico / Electric Oven

43



44

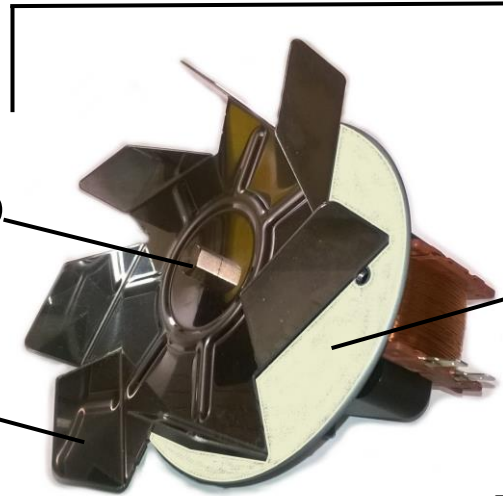

45

46

47

 
48 orange




49 green



50

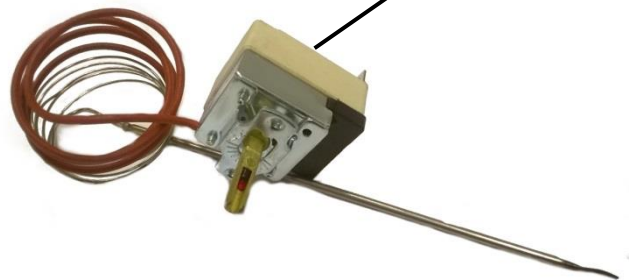

51

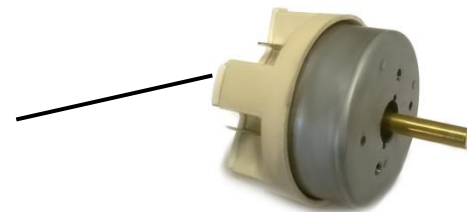 

52
Blue



53
Grey



54
Red



55
Blue



56
Grey



57
Red

Forno Gas / Gas Oven

