

HENDI REVOLUTION

226421 226438 226445 226452 226469

n°	ARTICLE	DESCRIPTION	PRICE
04	012837001	Ignition box (6 exits)	€ 6,50
05	012837002	Ignition box (4 exits)	€ 6,00
12	012837016	Nozzle Ø 0,70 for Dual 5KW central (Methane - Europe)	€ 0,50
	012837017	Nozzle Ø 1,10 for Dual 5KW lateral (Methane - Europe)	€ 0,50
	012837018	Nozzle Ø 0,46 for Dual 5KW c. (30MBAR LPG - Europe, no DE,AT,CH)	€ 0,50
	012837019	Nozzle Ø 0,72 for Dual 5KW l. (30MBAR LPG - Europe, no DE,AT,CH)	€ 0,50
	012837020	Nozzle Ø 0,40 for Dual 5KW central (50MBAR LPG - DE, AT, CH)	€ 0,50
	012837021	Nozzle Ø 0,68 for Dual 5KW lateral (50MBAR LPG - DE, AT, CH)	€ 0,50
	012817013	Nozzle Ø 1,40 for CHEF R 3,5KW (Methane - Europe)	€ 0,50
	012837030	Nozzle Ø 0,95 for CHEF R 3,5KW (30MBAR LPG - Europe, no DE,AT,CH)	€ 0,50
	012837031	Nozzle Ø 0,87 for CHEF R 3,5KW (50MBAR LPG - DE, AT, CH)	€ 0,50
14	012817025	Gas tap for 3,5KW***	€ 8,00
	012817035	Gas tap for 3,5KW (since May 2016)	€ 8,00
15	012817026	Gas tap for 6KW***	€ 8,00
	012817036	Gas tap for 6KW (since May 2016)	€ 8,00
16	012837036	Micro-switch chain for 4 burners	€ 6,50
17	012837038	Micro-switch chain for 6 burners	€ 6,50
18	012807051	Black knob for gas tap complete with adapter and blue label	€ 3,50
	012807071	Black knob for gas tap with blue label (since May 2016)	€ 3,50
19	012807061	Black knob for gas tap complete with adapter and grey label	€ 3,50
	012807081	Black knob for gas tap with grey label (since May 2016)	€ 3,50
20	012807066	Black knob for gas tap complete with adapter and red label	€ 3,50
	012807086	Black knob for gas tap with red label (since May 2016)	€ 3,50
28	012807035	Support with roller for hinges	€ 5,00
29	012807033	Right oven door hinge	€ 7,00
30	012807034	Left oven door hinge	€ 7,00
31	012807025	GN1/1 Oven grid	€ 7,50
32	012807026	Right grid/tray holder for GN1/1 oven	€ 9,00
33	012807027	Left grid/tray holder for GN1/1 oven	€ 9,00
34	012805001	Fixing screw for grid/tray holders	€ 1,50
35	012807028	Oven door seal for GN1/1 oven	€ 7,00
36	012807036	Oven door handle	€ 16,50
37	012805029	Complete Oven door (with handle and hinges)	€ 85,00
38	018237011	Equipotential earthing terminal	€ 2,00
39	018237009	Power cable for gas cookers and tops	€ 4,00
40	018237008	Terminal box for gas cookers and tops	€ 3,50
41	012807032	Stainless steel foot, adjustable in height, for cookers	€ 4,00
42	002307007	Stainless steel foot, adjustable in height, for Tops	€ 2,50
43	018237001	3000W Round heating element	€ 15,00
44	018237012	Complete fan motor with fan for electric ovens	€ 20,00
45	018237004	M6 Fan fixing nut	€ 0,50

 
46	018237003	Stainless steel fan, 7 blades	€ 5,50
47	018237014	Guard disk for fan motor insulation	€ 2,00
48	018237005	Orange indicator light	€ 0,75
49	018237006	Green indicator light	€ 0,75
50	018237002	1 bulb thermostat (0-270°C)	€ 15,00
51	018237007	MTS57 timer (120')	€ 15,00
52	012807053	Black knob for el. thermostat complete with adapter and blue label	€ 3,50
	012807073	Black knob for el. thermostat with blue label (since May 2016)	€ 3,50
53	012807063	Black knob for el. thermostat complete with adapter and grey label	€ 3,50
	012807083	Black knob for el. thermostat with grey label (since May 2016)	€ 3,50
54	012807068	Black knob for el. thermostat complete with adapter and red label	€ 3,50
	012807088	Black knob for el. thermostat with red label (since May 2016)	€ 3,50
55	012807052	Black knob for timer complete with adapter and blue label	€ 3,50
	012807072	Black knob for timer with blue label (since May 2016)	€ 3,50
56	012807062	Black knob for timer complete with adapter and grey label	€ 3,50
	012807082	Black knob for timer with grey label (since May 2016)	€ 3,50
57	012807067	Black knob for timer complete with adapter and red label	€ 3,50
	012807087	Black knob for timer with red label (since May 2016)	€ 3,50
58	012807109	Burner for GN1/1 gas oven (complete with TC and spark plug)	€ 20,00
59	012807101	Nozzle holder for gas oven	€ 5,00
60	012817023	Nozzle Ø 1,60 for gas oven (Methane - all Europe)	€ 0,50
	012817024	Nozzle Ø 1,02 for gas oven (LPG - all Europe)	€ 0,50
61	012807105	Ignition box for GN1/1 gas oven (2 exits)	€ 5,50
63	012807111	1-way thermostat for GN1/1 gas oven	€ 18,00
65	012807054	Black knob for gas oven complete with adapter and blue label	€ 3,50
	012807074	Black knob for gas oven with blue label (since May 2016)	€ 3,50
66	012807064	Black knob for gas oven complete with adapter and grey label	€ 3,50
	012807084	Black knob for gas oven with grey label	€ 3,50
67	012807069	Black knob for gas oven complete with adapter and red label	€ 3,50
	012807089	Black knob for gas oven with red label (since May 2016)	€ 3,50
68	012837033	Enameled wire pan support for 2 burners Prochef	€ 20,00
69	012837042	Complete CHEF R 3,5KW (no Thermocouple, no spark plug)	€ 22,00
70	012837024	Burner cup for CHEF R 3,5KW	€ 9,50
71	012837025	Diamond-cut burner body for CHEF R 3,5KW	€ 6,50
72	012837026	Burner lid for CHEF R 3,5KW	€ 6,00
73	012837027	Thermocouple for CHEF R 3,5KW	€ 4,00
74	012837028	Spark plug for CHEF R 3,5KW	€ 1,50
75	012837041	Complete Dual 5KW (no Thermocouple, no spark plug)	€ 28,50
76	012837007	Burner cup for Dual 5KW	€ 17,00
77	012837008	Diamond-cut burner body for Dual 5KW	€ 6,50
78	012837009	External burner lid for Dual 5KW	€ 4,00
79	012837010	Inner burner lid for Dual 5KW	€ 1,00
80	012837014	Thermocouple for Dual 5KW	€ 4,00
81	012837011	Spark plug for Dual 5KW	€ 3,00

*** These gas taps are out of stock

The difference between new and old ones is the 0 position of shaft. For the cookers produced before May 2016 it is possible to use the new gas taps simply removing the adapter from knob, rotate it in order to make it match with gas tap shaft, and place it back into the knob in this position.

*****THIS IS A DRAFT VERSION*****

Piano Gas PC / PCGas Hob

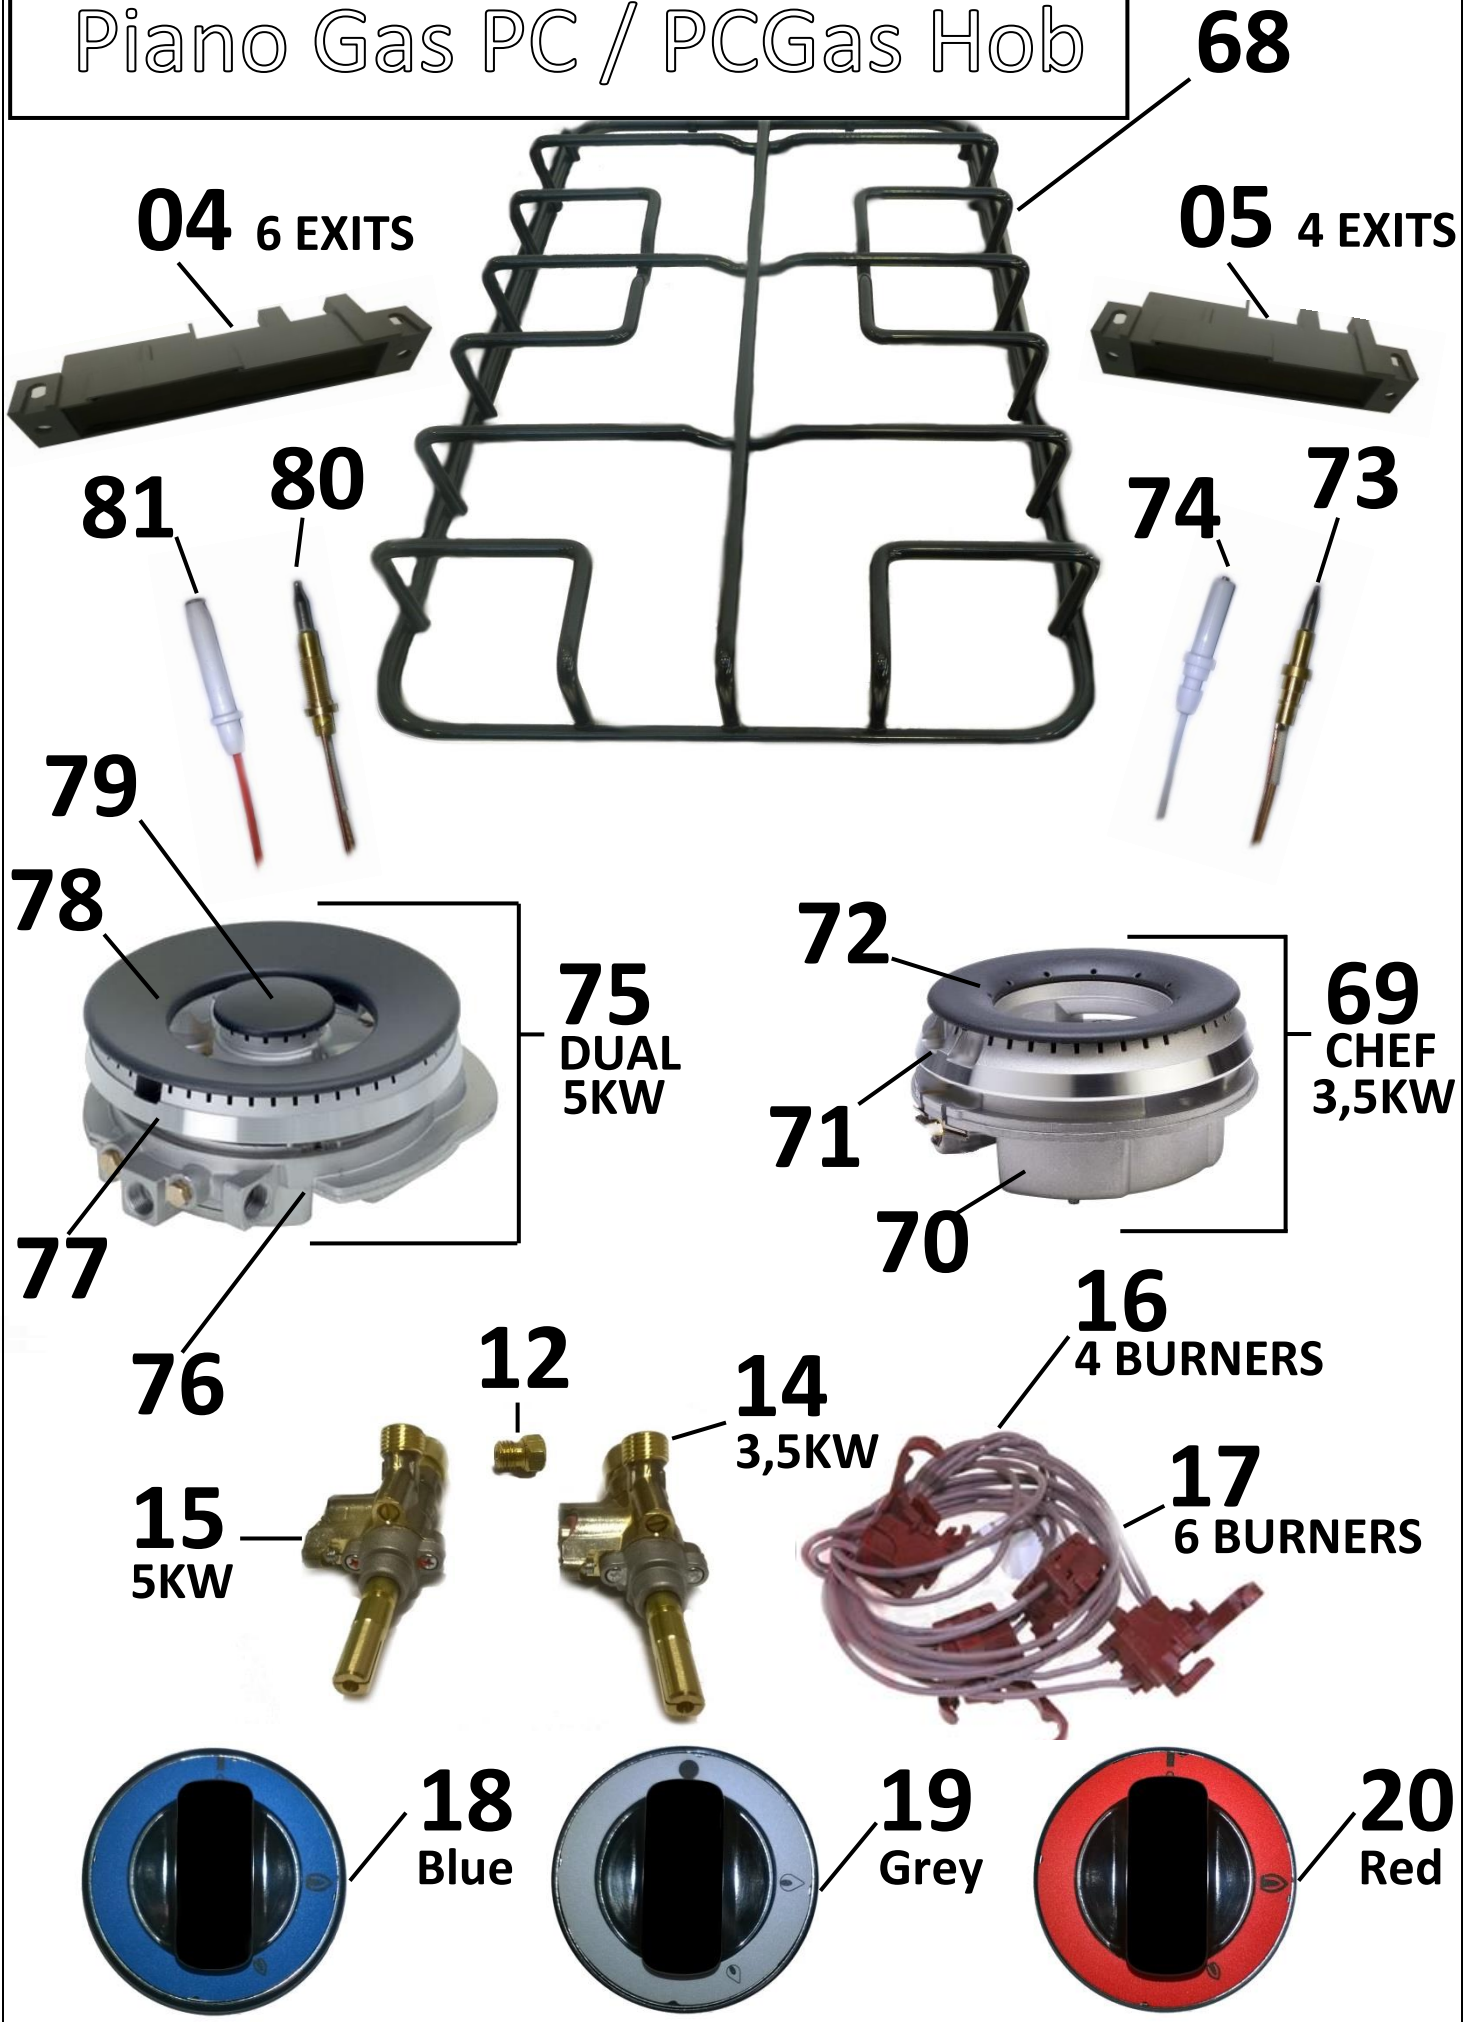

04 6 EXITS

68

05 4 EXITS

81

80

74

73

79

78

75
DUAL
5KW

72

71

69
CHEF
3,5KW

70

77

76

12

14

3,5KW

16

4 BURNERS

15

5KW

17

6 BURNERS



18

Blue



19

Grey



20

Red

Accessori / Accessories

 


Forno Elettrico / Electric Oven

43



44

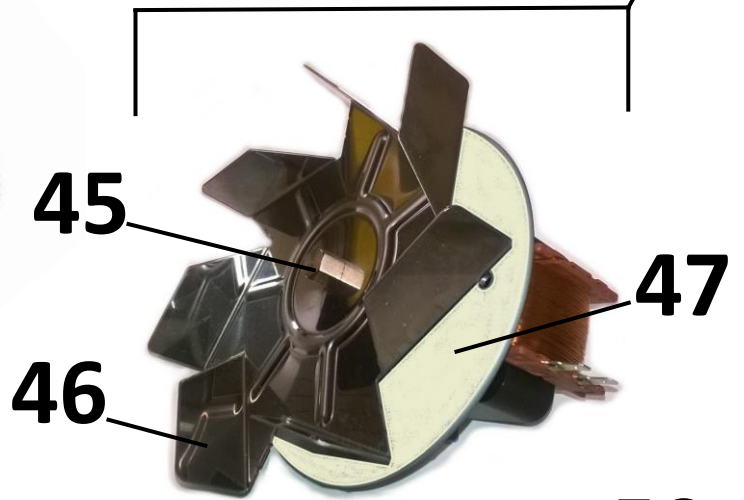

45

46

47

 
48 orange



49 green



50

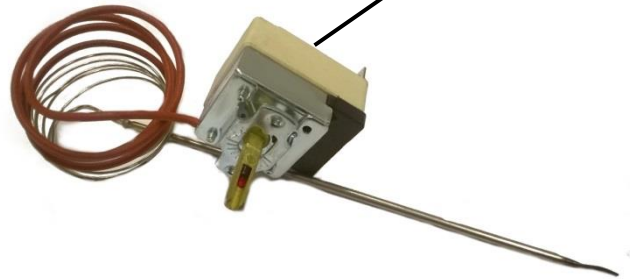

51



52
Blue



53
Grey



54
Red



55
Blue



56
Grey



57
Red

 
Forno Gas / Gas Oven




58



59



60

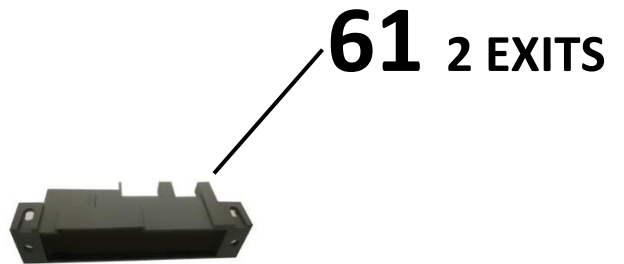 

61 2 EXITS

63
1-Way



65
Blue



66
Grey



67
Red