

CAUTION:
NEVER PLACE
BLADE
ASSEMBLY ON
BASE UNLESS
ASSEMBLED TO JAR

026830
Caution Label

WARING
COMMERCIAL


Europe NuBlend Blenders

BB180PE


Eastman container

BB180SE

stainless steel container

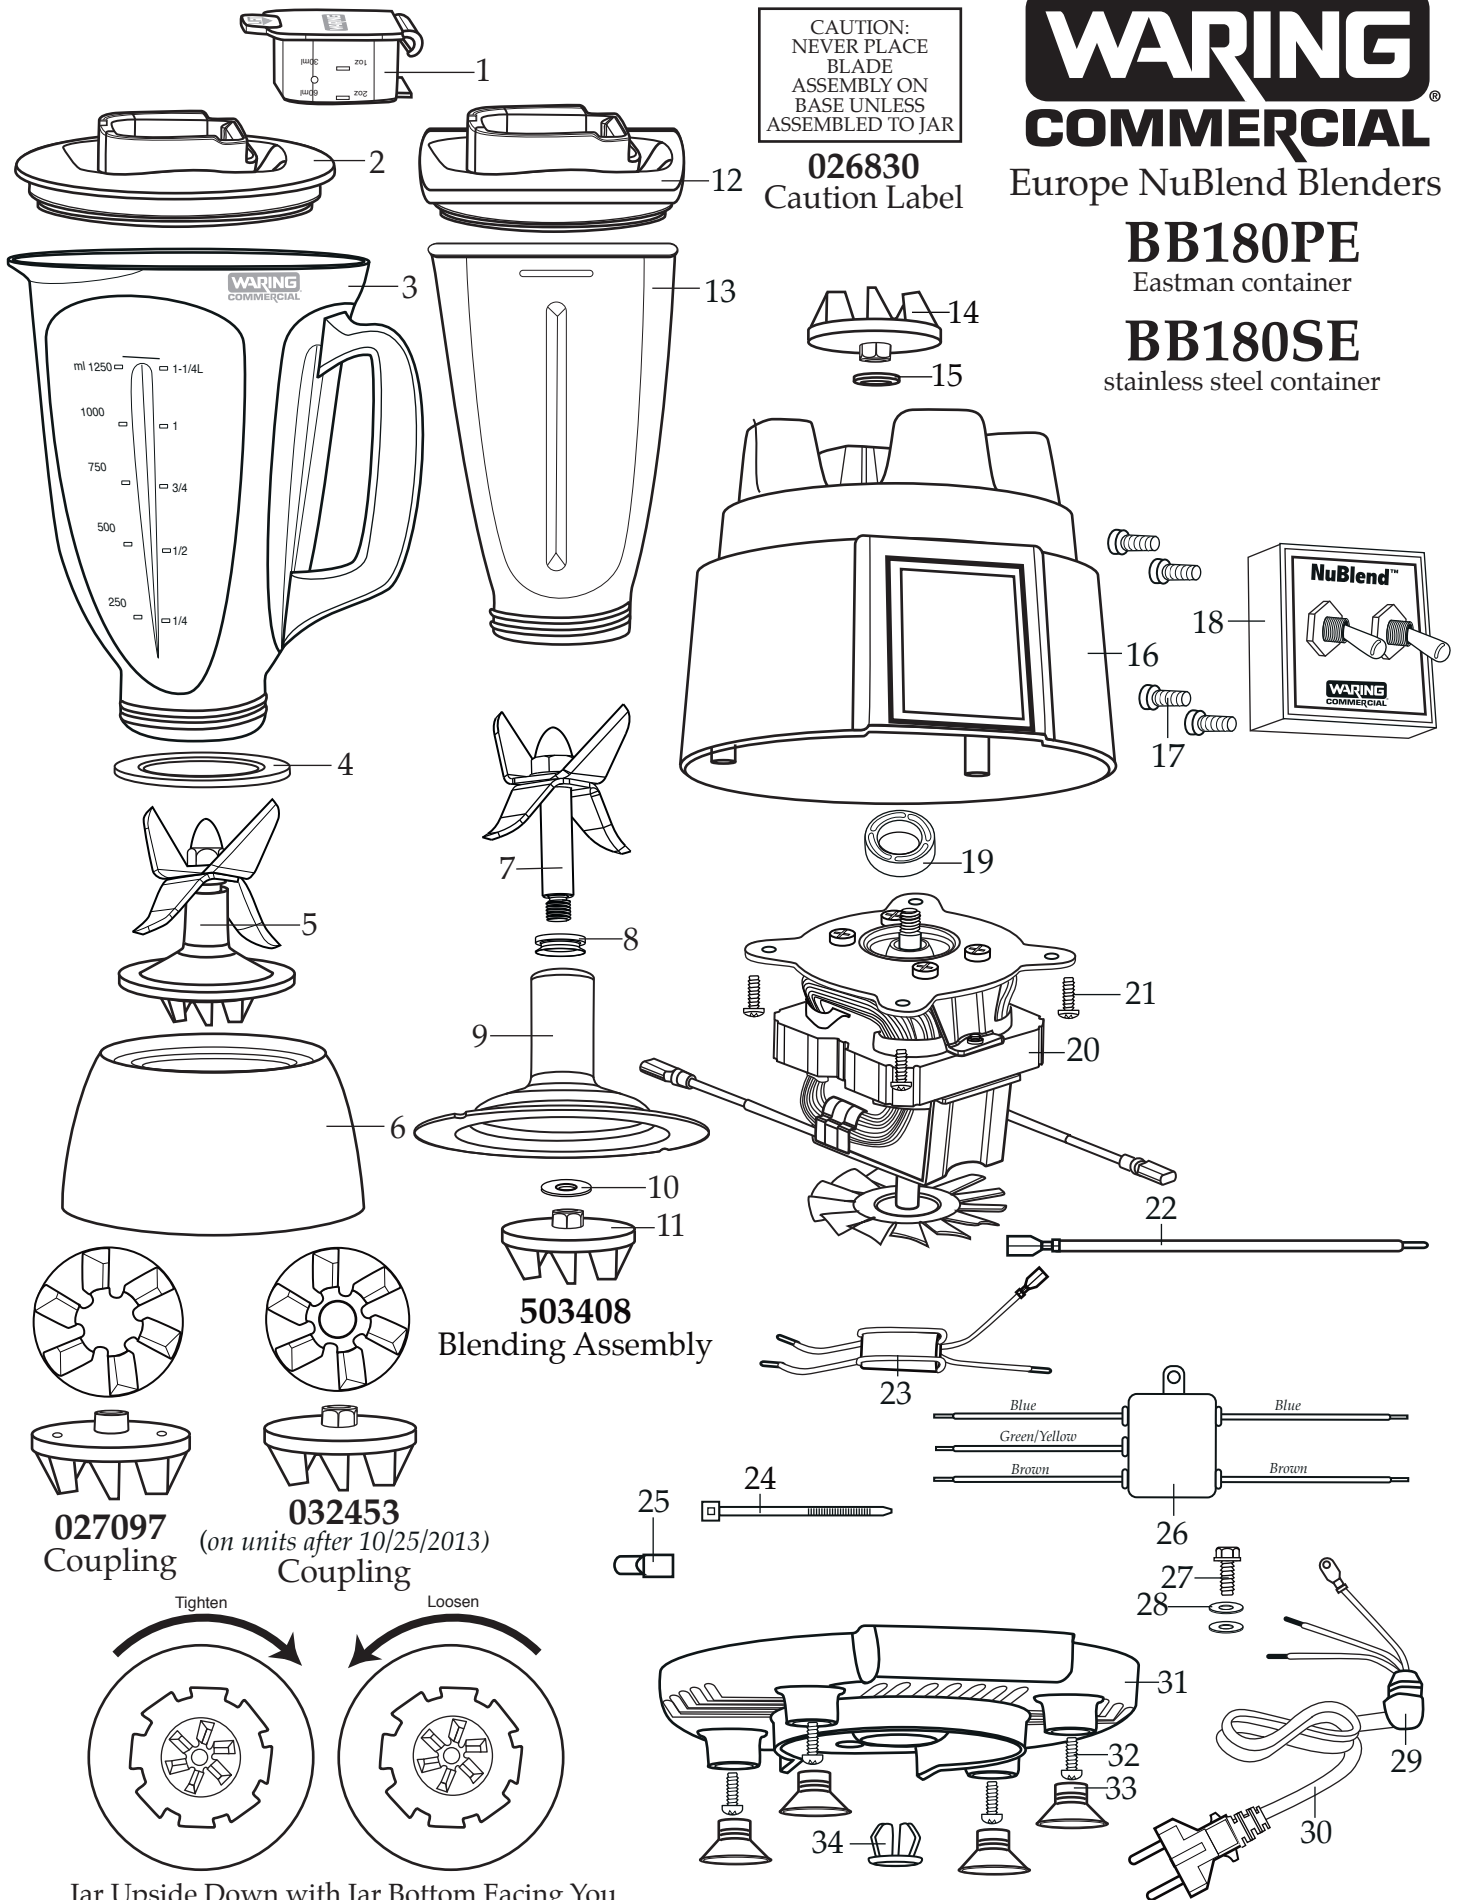


503408
Blending Assembly

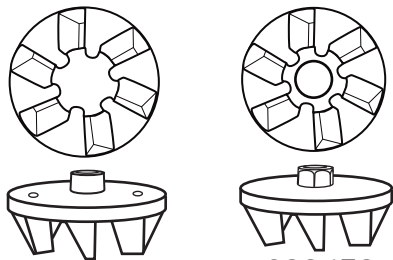

027097
Coupling

032453
Coupling
(on units after 10/25/2013)

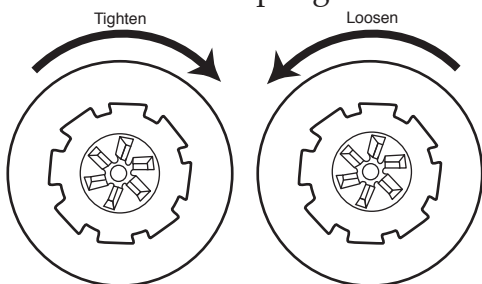

Jar Upside Down with Jar Bottom Facing You

Graphic By: Sandra A. Montysko

Revised January 3, 2018 Approved 1/3/18

Page 1 of 4

Catalog

BB180PE

BB180E

BB180SE

(on units after 7/26/2017) *(on units after 8/26/2010)***Model**

BB180

BB180PE

BB180SE



Illustration #	Part #	Description
1	026282-E	Cover Lid <i>(changed after 10/29/2010)</i>
2	026281-V	Jar Lid <i>(changed after 10/29/2010)</i>
3	026280-E	44 oz. Eastman Container <i>(changed after 10/29/2010)</i>
4	026284	Jar Seal
5	503408 503377	Blending Assembly <i>(changed after 10/25/2013)</i> (use 503408)
6	026285	Jar Bottom
7	503407 503378	Blade Assembly <i>(on units after 10/25/2013)</i> Blade & Shaft Assembly
8	027716	V Seal
9	503358	Bearing Holder
10	030426	Nylon Washer
11	032453 027097	Clutch <i>(on units after 10/25/2013)</i> Clutch
12	026852-V	Jar Lid <i>(changed after 10/29/2010)</i>
13	026851	32 oz. Stainless Steel Container
14	032453 027097	Clutch <i>(on units after 10/25/2013)</i> Clutch
15	035756 026413 003507	Cap Washer <i>(on units after 6/1/2017)</i> Cap Washer <i>(on units after 6/3/2011)</i> Washer
16	028212	Top Housing <i>(changed after 1/8/2007)</i>
17	026267	Panel Mount Screw (4 required <i>on units after 1/8/2007</i>)
18	028927	230 Volt Switch Assembly <i>(on BB180PE units after 9/26/2008)</i> <i>(on BB180SE units after 11/14/2006)</i>
19	035849 026269	Motor Seal <i>(on units after 6/1/2017)</i> Upper Motor Mount
20	035834 033057 029026 502901	230 Volt Chiaphua Motor <i>(on units after 6/1/2017)</i> 230 Volt ECM Motor <i>(on units after 10/25/2013)</i> Motor <i>(on units after 9/26/2008)</i> 230 volt ECM Motor <i>(obsolete)</i>
21	032611 026716	Screw (4 required <i>on units after 6/1/2017</i>) Screw (4 required)
22	503176	7" Red Lead Assembly
23	503517	Lead / Ferrite Assembly <i>(on units after 6/1/2017)</i>
24	013731	Cable Tie (5 required <i>on units after 9/26/2008</i>) (7 required <i>on units after 1/6/2004</i>) - (6 required)
25	012409	Crimp Connector (6 required <i>on units after 9/26/2008</i>) - (5 required)
26	503268 502752	Filter Assembly <i>(on units after 6/1/2017)</i> EMI Filter Assembly

Catalog

BB180PE BB180E BB180 BB180PE
 BB180SE (on units after 7/26/2017) (on units after 8/26/2010) BB180SE

Model

Waring Factory Service Center
 314 Ella T. Grasso Ave.
 Torrington, CT 06790
 Tele. 1-800-269-6640
 Fax 860-496-9017
 www.waringcommercialproducts.com

Illustration #	Part #	Description
27	027278 002436	Ground Screw (2 required on units after 9/26/2008) Screw (3 required)
28	002943	Lock Washer (4 required on units after 9/26/2008) (6 required)
29	013680	Strain Relief
30	503200 502902	Cord Set (on units after 9/26/2008) Cord Set
31	028580-X 027063 502964 502930	Bottom Housing (on units after 9/26/2008) Bottom Housing ONLY (on units after 5/7/2004) Bottom Housing Assembly with Reset (on units after 5/7/2004) Bottom Housing Assembly with Reset (No Longer Available)
32	026831	Torx Screw (4 required)
33	026278	Suction Cup Foot (4 required)
34	027385	Bottom Plate Plug (on units after 5/7/2004)

Parts No Longer Used (limited availability)



024368-Reset Switch
(last used 9/26/2008)



015098-Ring Nut (2 required)
(on BB180PE units before 10/30/2008)
(on BB180SE units before 6/21/2007)



026825-Switch (momentary on)
(on BB180PE last used 9/26/2008)
(on BB180SE last used on 6/4/2007)

 


014604-Washer
(last used 9/26/2008)



015184-Hex Nut
(last used 9/26/2008)


502899-Brown Lead
(last used on 7/17/2003)



026537-Toggle Switch
(on BB180PE last used 9/26/2008)
(on BB180SE last used on 6/4/2007)



026837-Name Plate
(on BB180PE last used 9/26/2008)
(on BB180SE last used on 6/4/2007)

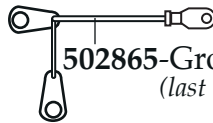


502865-Ground Lead Assembly
(last used on 7/17/2003)


502896-Black Lead
(last used on 7/17/2003)



026690-Eyelet (4 required)
(last used on 6/1/2017)

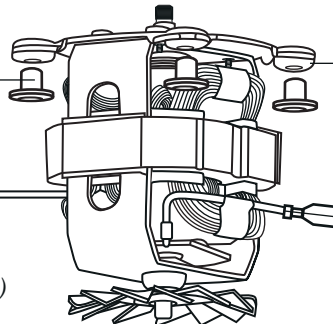

026841-Rubber Bushing (4 required)
(last used on 6/1/2017)

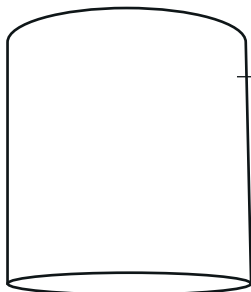

027053- Shroud
(last used on 6/1/2017)
026669- Shroud
(last used on 11/13/2003)



502763- Resistor Assembly
(last used on 6/1/2017)



502915-5" Brown Lead
(last used on 6/1/2017)

Catalog

BB180PE

BB180E

Model

BB180

BB180PE


BB180SE

(on units after 7/26/2017) (on units after 8/26/2010)


BB180SE

Waring Factory Service Center
314 Ella T. Grasso Ave.
Torrington, CT 06790
Tele. 1-800-269-6640


Waring Commercial
Fax 860-496-9017
www.waringcommercialproducts.com

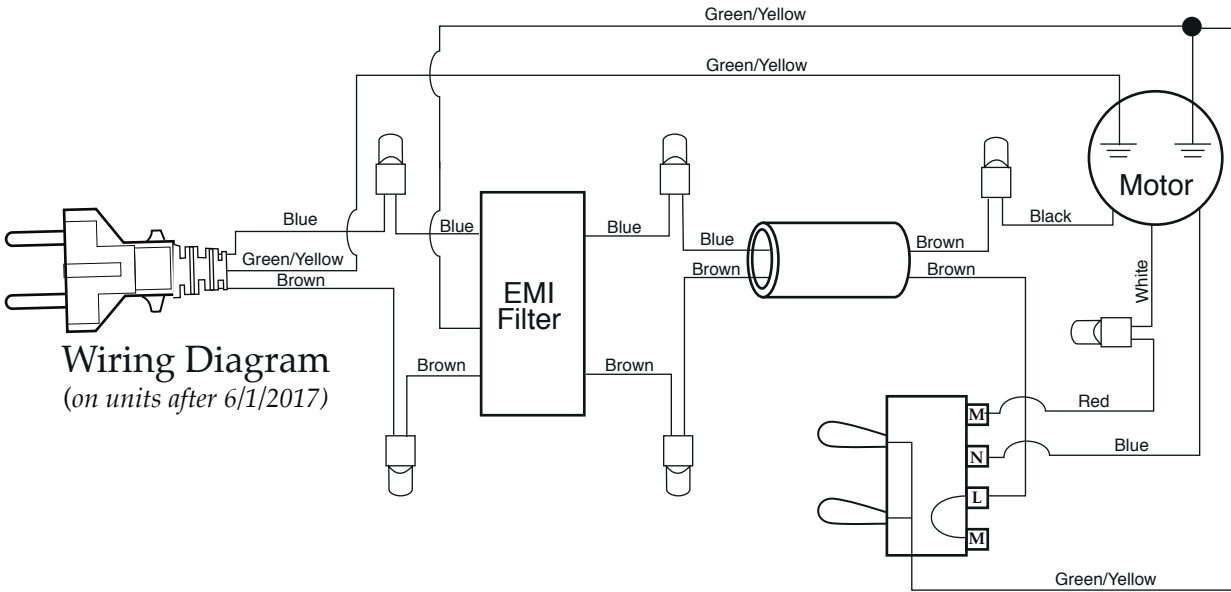

Wiring Diagram
(on units after 6/1/2017)

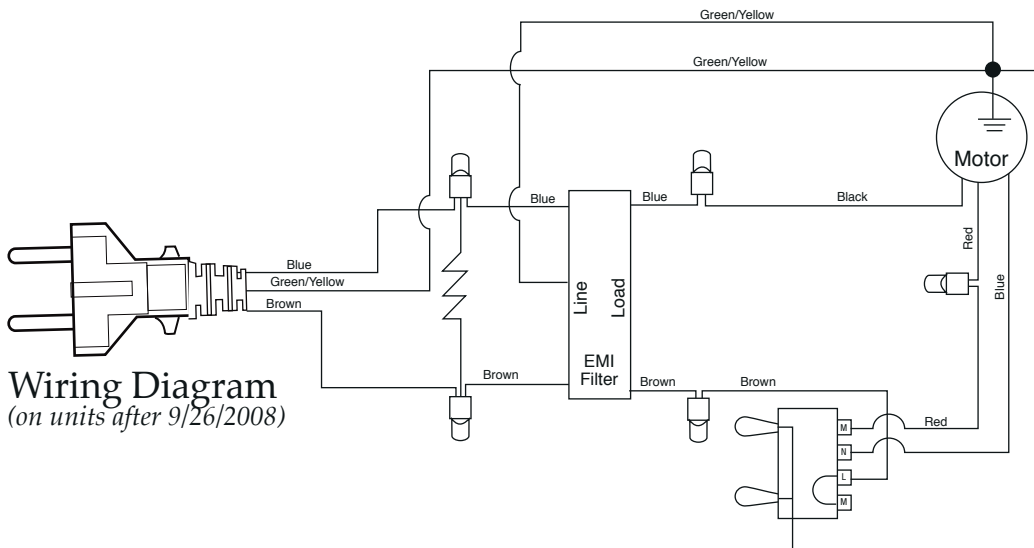

Wiring Diagram
(on units after 9/26/2008)

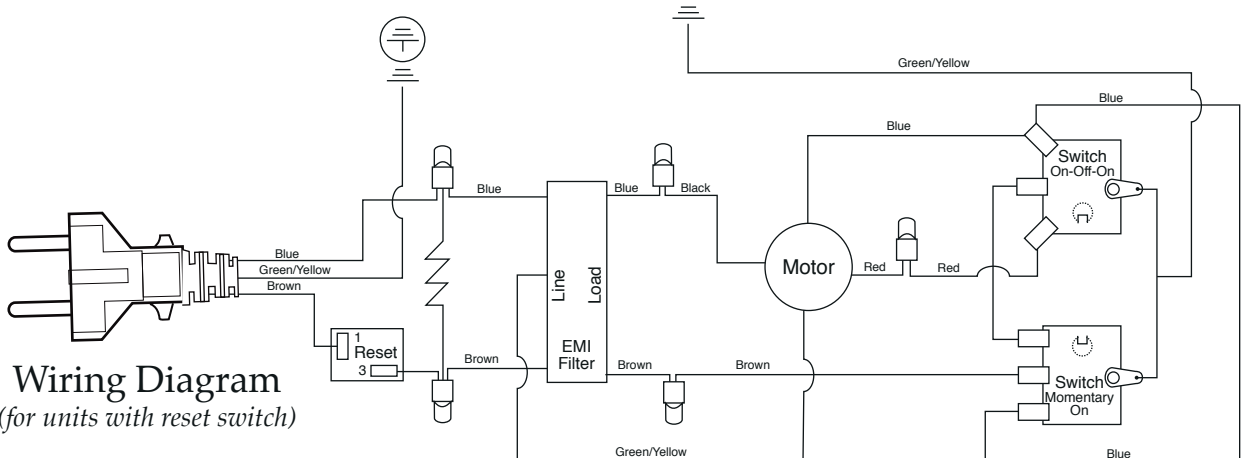

Wiring Diagram
(for units with reset switch)