

taurus

RCC.TAU.SEMIHORECA(MY-COOK-1800 SH)

Code: 923007000
6KA



Cover 
Exploded View 
Codes 
Specifications 

Taurus Household Appliances
After-Sales Service

Kitchen Machine

Mycook 1.8 Semihoreca





Exploded (1/2)




026062000



026065000




026401000

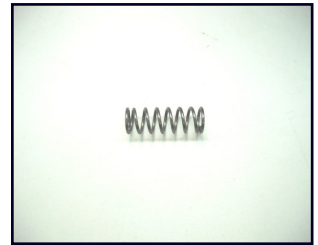


036081000




039296000

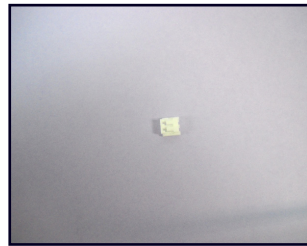


052108000

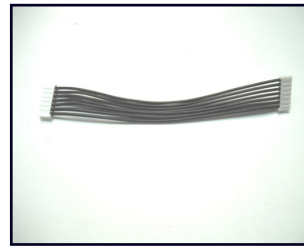


069210000

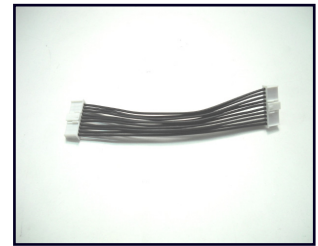

069212000

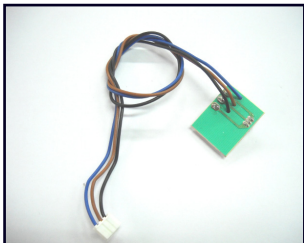


069326000

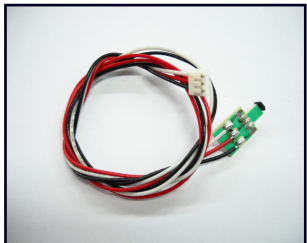

069327000



069328000

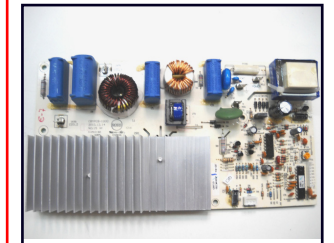


069329000



069362000




069363000

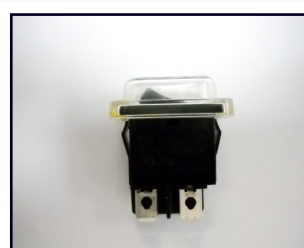

069347000



074215000

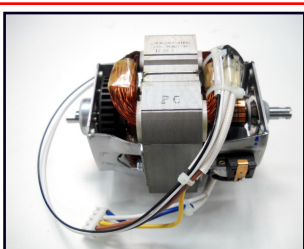

082207000



211812000



221102000




222420000




Exploded (2/2)




222421000

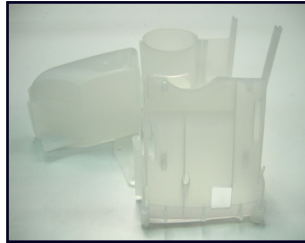

222476000

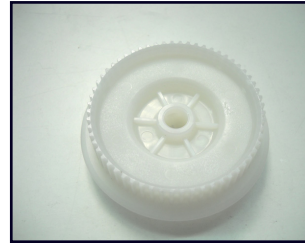

222424000

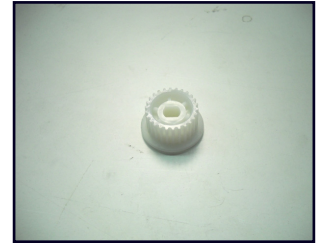

222425000



231910000



231911000



231912000



232106000



232107000



231932000



232109000 6KA
231952000 CAV



233015000




233016000



233009000



328301000

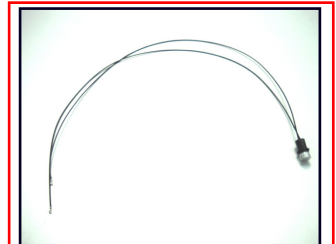

369215000




053006000



374770000



374779000

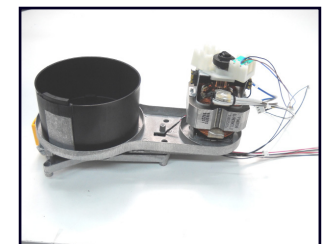


476267000




Codes (1/2)

CODE	DESCRIPTION
026062000	MYCOOK BLADES SILICON SEALING RING
026065000	JAG LID SILICON SEALING RING (Ver 2)
026401000	HID 3M 4867 TOOTHED BELT
036081000	NTC STAINLESS STEEL SPRING
039296000	FOOD PROCESSOR MAINS CONNECTION
052108000	NTC JAR CONNECTOR
053006000	COIL SHOCK 10mHH
069210000	PCI CONNECTOR PCI INDUCTION CONTROL
069212000	PCI CONNECTOR PCI POWER CONTROL
069326000	HALL PCI TACHOMETER WITH CONNECTOR
069327000	JAR HALL PCI WITH PRESENCE CONNECTOR
069328000	NTC COIL PCI
069329000	INDUCTION PCI
069347000	SWITCH WITH PROTECTIVE COVER
069362000	C. PCI MY COOK POWER STANDBY (VER 2)
069363000	C. PCI COOK MY CONTROL STANDBY (VER 2)
074215000	INDUCTION COIL COOK MY CU-AL
082207000	UNIVERSAL MOTOR SEMIHOREA
211812000	CONTROL FRONT COVER TAMP.SEMIHOR
221102000	MYCOOK SUPPORT DOWEL BLACK

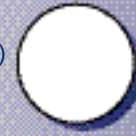


Codes (2/2)

CODE	DESCRIPTION
222420000	MOTOR NTC TACHOMETER SUPPORT
222421000	FERRITE MULTI-POLE MOTOR SHAFT SUPPORT
222424000	HTD 3M TOOTHED WHEEL 60 TEETH
222425000	TOOTHED WHEEL 26 TEETH
222476000	FAN SUPPORT AND CIRCUITS (VER 2)
231910000	MYCOOK HANDLE CONTROL
231911000	JAR LOWER HANDLE
231912000	JAR UPPER HANDLE
232106000	JAR BLADES SUPPORT (VER 2)
232107000	JAR BLADES FIXING CLAMP (VER 2)
232108000	CHASSIS JAR COUPLER (VER 2)
232109000	BLADES SHAFT DRIVE PINION (VER 2)
233009000	SEMIHORECA PAINTED BODY. TOYOTA 1G3 TAM
233015000	TEMPERATURE-SPEED KNOB
233016000	KEY SEMI-HORECA
328301000	CHASSIS WITH GEAR AND BEARING
369215000	JAR TEMPERATURE SENSOR
374770000	FAN MOTOR WITH TURBINE
374779000	BASE ASSEMBLY SEMI-HORECA
476276000	SET CHASSIS-ENGINE TEMPERATURE SENSOR.(VER 2)



Accessories

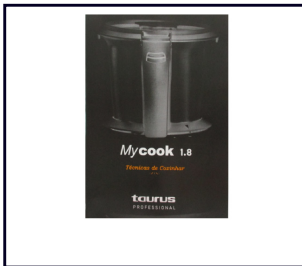

062827000



231913000



231914000



231922000



374755000



374823000



374789000



428129000



476274000









528095000

Codes Accessories

CODE	DESCRIPCIÓN
062827000	TECHNICAL GUIDE KITCHEN
231913000	MYCOOK MEASURING CUP
231914000	MYCOOK JAR LID
231922000	MY COOK MIXING BLADE
374755000	MYCOOK BLADES ASSEMBLY
374823000	TOP PITCHER SET AFTER SALES (VER 2)
374789000	C.ESPATULA MONOBLOCK
428129000	MY COOK JAR+BOX+PACKING BAG+TRIM RING (No blades)
476274000	PITCHER SET WITH BLADES (VER 2)
580095000	MY COOK JAR WITH LID ASSEMBLY (VER 2)



Problems and Remedies 1/1

ANOMALY	MESSAGE ON DIGITAL SCREEN	REPAIR
The digital screen displays ERR4.		Possible overload of the motor. Remove the food from the jar.
The digital screen displays ERR5.		Possible overload of the motor. Leave the appliance to cool.
The digital screen displays ERR1, 2, 3, 6, 7, 10.		Disconnect / connect the electrical current. If "error" still appears, write down the number and take the appliance to the Authorized Technical Assistance Services.
The digital screen displays ERR8.		Possible overheating of the induction. Disconnect form the mains and remove the jar. Leave to cool.
The digital screen displays ERR9.		Possible overheating of the induction. Disconnect form the mains and remove the jar. Leave to cool. If "error" still appears, write down the number and take the appliance to the Authorized Technical Assistance Service.
The digital screen displays ERR11.		The jar and/or the lid have become detached. Attach the lid and the jar correctly.

ANOMALY	REPAIR
It does not turn on	Check whether it is connected to the mains. Check that the general switch is in an "ON" position. Check that the lid and the jar are well attached.
It does not heat	Check that you have done the following: 1 Selected time. 2 Selected temperature. 3 Selected speed.
It heats too much	Check that you have selected the correct temperature. Check that the temperature sensor is clean and that it makes good contact with the jar.



Technical Specifications

Mode	MY COOK 1.8 SH
Typ	MY-COOK-1800SH
Voltage	220-230V 50Hz
Power	1800W

Wiring Diagram

